Inspection

1. Uplift the vehicle with lift.
2. Remove the nuder cover.
   (Refer to Engine Mechanical System - "Engine Room Under Cover")
3. Loosen the oil filler plug (A).




4. Check the oil level.

NOTICE

â Proper oil level should be consistent with the oil filler hole.
¢

â If not, should add oil through the oil filler plug hole.
¢

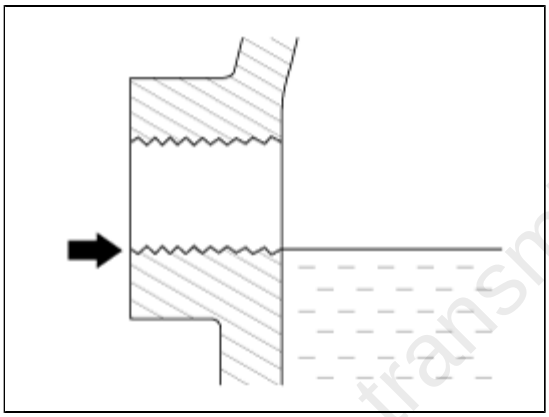

5. Install the filler plug.

Tightening torque:
58.9 - 78.5 N.m (6.0 - 8.0 kgf.m, 43.4 - 57.8 lb-ft)

6. Install the under cover.
   (Refer to Engine Mechanical System - "Engine Room Under Cover")


Replacement

1. Uplift the vehicle with lift.
2. Remove the nuder cover.
   (Refer to Engine Mechanical System - "Engine Room Under Cover")
3. Drain the manual transaxle oil after loosening the drain plug (A) and then install the drain plug with new gasket.

Tightening torque:

transmissionmanuals.com

58.9 - 78.5 N.m (6.0 - 8.0 kgf.m, 43.4 - 57.8 lb-ft)

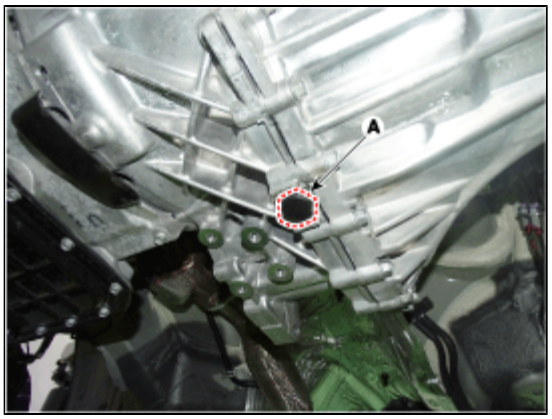

4. Add new oil through the filler plug hole.

Standard oil :
API Service GL-4, SAE 70W
Recommnend oil :
(- SHELL : SPIRAX S6 GHME 70W, SK : HK MTF 70W, GS CALTEX : GS MTF HD 70W)
Oil capacity :
1.8 - 1.9 L (0.46 - 0.50 U.S.gal., 1.90 - 2.00 U.S. qt., 1.58 - 1.67 lmp qt.)



5. Install the filler plug with new gasket.

Tightening torque:
58.9 - 78.5 N.m (6.0 - 8.0 kgf.m, 43.4 - 57.8 lb-ft)

6. Install the under cover.
(Refer to Engine Mechanical System - "Engine Room Under Cover")

Rate this Document
Document Type : SHOP
Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

transmissionmanuals.com