
Description

Components location : Control shaft complete

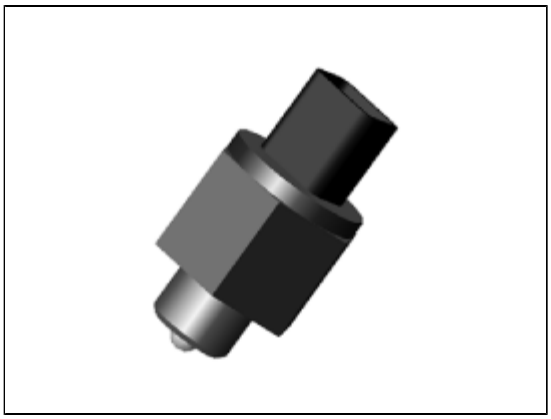

Operation principle : Back up lamp switch is pushed by select arm sliding when reversing, and switches the back up lamp.

Function : Turn on the back up lamp when reversing.

Rate this Document

□ Document Type : SHOP

□ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

transmissionmanuals.com