

Inspection

1. Remove the air cleaner assembly and air duct.
   (Refer to Engine Mechanical System - "Air cleaner")
2. Remove the battery and battery tray.
   (Refer to Engine Electrical System - "Battery")
3. Disconnect the back up lamp switch connector (A).

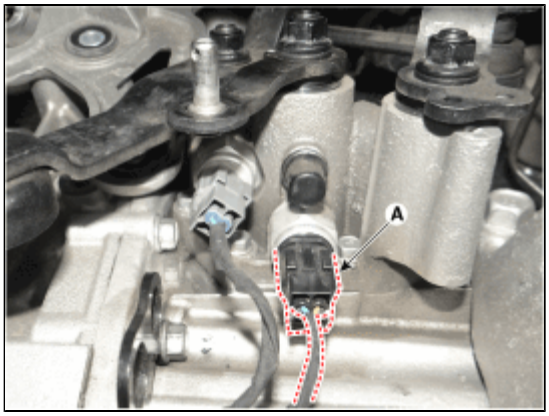


4. Check the continuity between no. 1 and 2 terminals of backup lamp switch. When the shift lever is in reverse, there should be continuity.

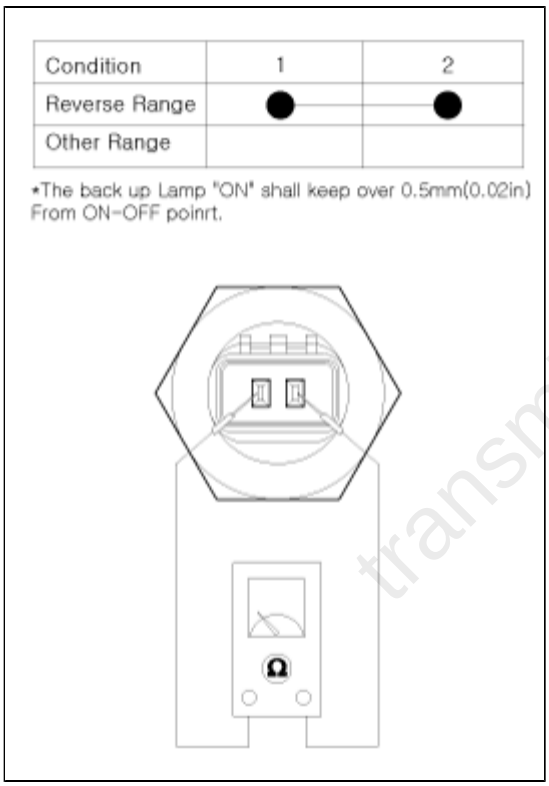

Replacement

1. Remove the air cleaner assembly and air duct.
   (Refer to Engine Mechanical System - "Air cleaner")
2. Remove the battery and battery tray.
   (Refer to Engine Electrical System - "Battery")
3. Disconnect the back up lamp switch connector (A).

transmissionmanuals.com

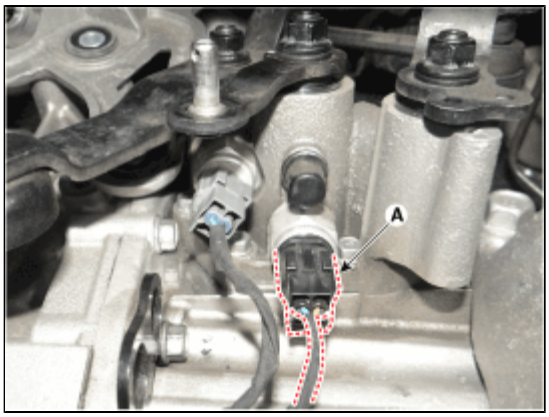

4. Remove the back up lamp switch (A).



5. Replace the new back up lamp switch.

Tightening torque :
39.2 - 58.8 N.m (4.0 - 6.0 kgf.m, 28.9 - 43.4 lb-ft)

transmissionmanuals.com

Rate this Document
☐ Document Type : SHOP
☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value