
Description

**Components location :** Control shaft complete

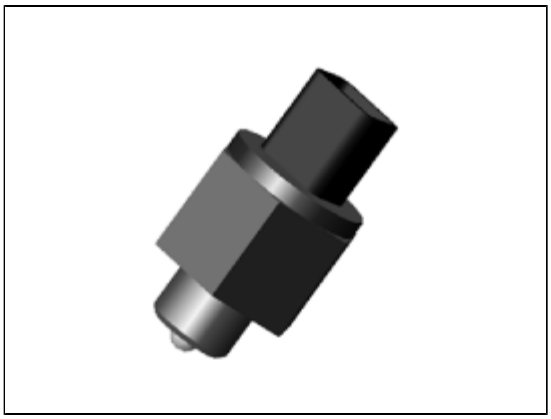

**Operation principle :** Neutral switch is pushed by the shift arm sliding when neutral, and transmit neutral signal.

**Function :** Transmit neutral signal when neutral.

Rate this Document

☐ Document Type : SHOP

☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

transmissionmanuals.com