

Inspection

1. Remove the air cleaner assembly and air duct.
   (Refer to Engine Mechanical System - "Air cleaner")
2. Remove the battery and battery tray.
   (Refer to Engine Electrical System - "Battery")
3. Disconnect the neutral switch connector (A).

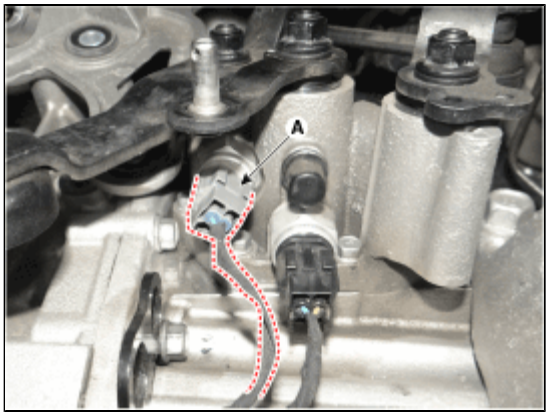


4. Check the continuity between no. 1 and 2 terminals of neutral switch.
   When the shift lever is in neutral, there should be contunuity.
5. If necessary, repair or replace the neutral position switch.

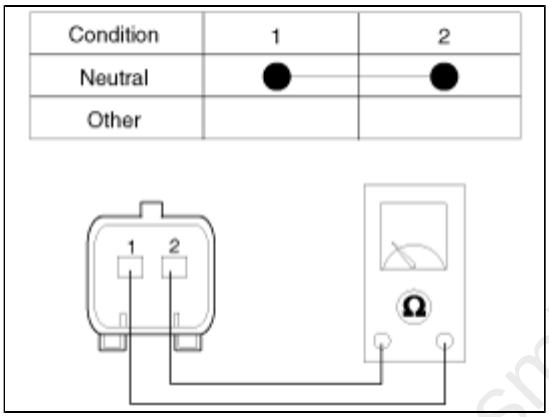

Replacement

1. Remove the air cleaner assembly and air duct.
   (Refer to Engine Mechanical System - "Air cleaner")
2. Remove the battery and battery tray.
   (Refer to Engine Electrical System - "Battery")
3. Disconnect the neutral switch connector (A).

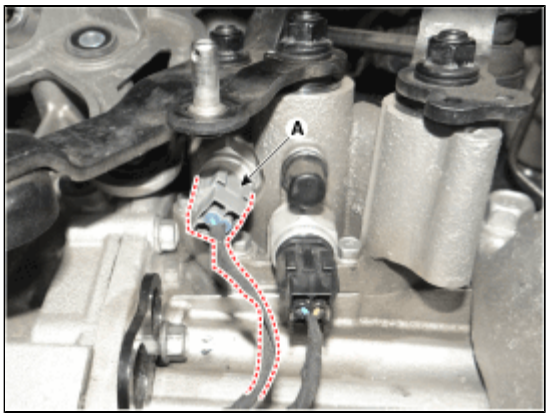

transmissionmanuals.com

4. Remove the neutral switch (A).



5. Replace the new neutral switch.

Tightening torque :
39.2 - 58.8 N.m (4.0 - 6.0 kgf.m, 28.9 - 43.4 lb-ft)

Rate this Document
☐ Document Type : SHOP
☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

transmissionmanuals.com