

Removal

1. Remove the air cleaner assembly and air duct.
   (Refer to Engine Mechanical System - "Air Cleaner")
2. Disconnect the vehicle speed sensor connector (A).

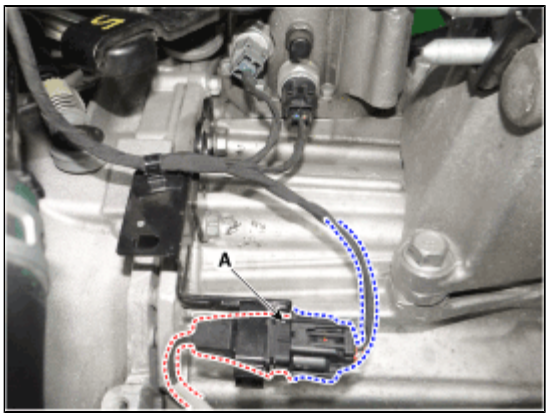

3. Remove the under cover.
   (Refer to Engine Mechanical System - "Engine Room Under Cover")
4. Remove the vehicle speed sensor (A).

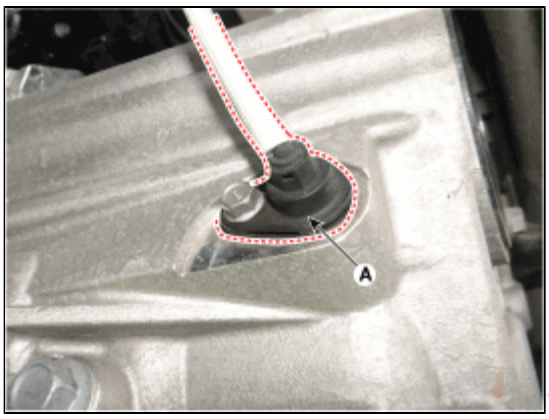

Installation

1. To install, reverse the removal procedure.

Rate this Document
Document Type : SHOP
Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

transmissionmanuals.com