

Removal

1. Move the shift lever to 4th gear.
2. Remove the air cleaner assembly and air duct.
   (Refer to Engine Mechanical System - "Air Cleaner")
3. Remove the battery and battery tray.
   (Refer to Engine Electrical System - "Battery")
4. Remove the engine control module (ECM).
   (Refer to Engine Control System - "ECM")
5. Remove the snap pin (A).

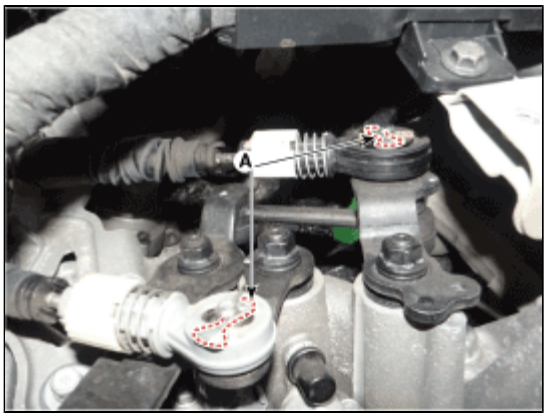

6. Disconnect the shift cable (B) and the select cable (C) from the bracket.

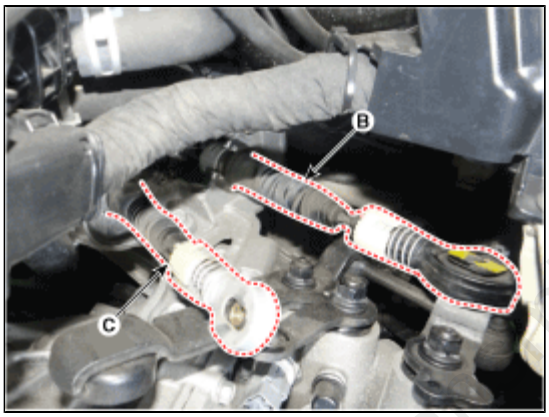


7. Remove the shift lever knob & boots (A) pull both of it up.




8. Remove the floor console assembly.
   (Refer to Body - "Floor Console")
9. Remove the snap pin (A).


transmissionmanuals.com

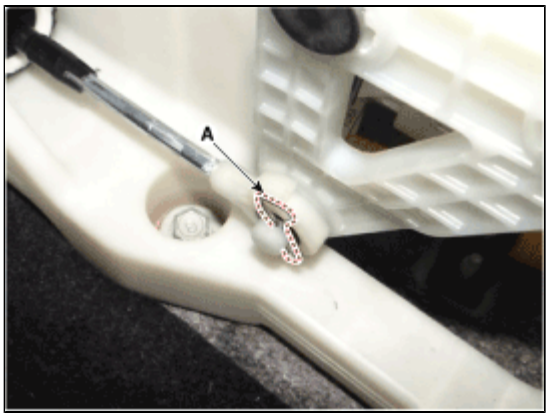

10. Remove the clip, in the shape of a "U"(B), from the cable end by spreading it towards both sides.

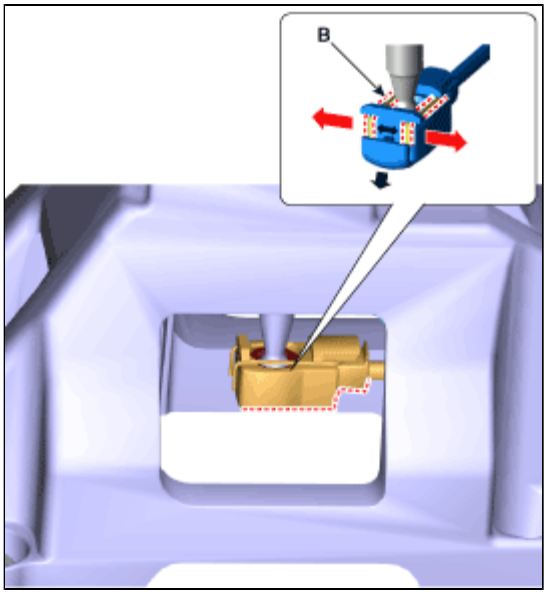


11. Disconnect the shift cable (A).
12. Disconnect the select cable (B).

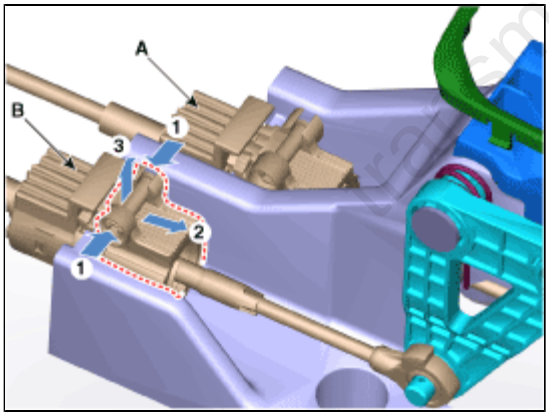

13. Remove the retainer (A) after removing the nut (B-2ea).

transmissionmanuals.com

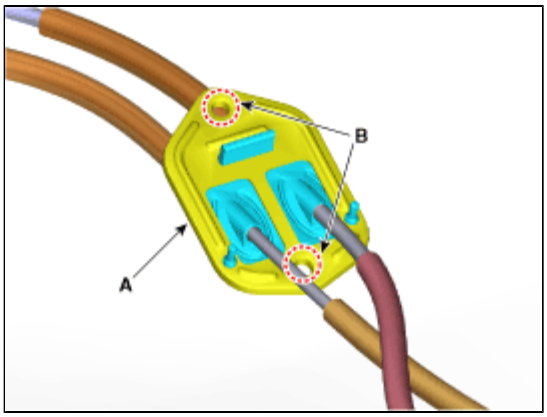


14. Remove the control cable assembly from the vehicle.

Installation

CAUTION


â Place the shift lever and transaxle side lever in 4th shift position and insert the lever fixing pin (A).

¢

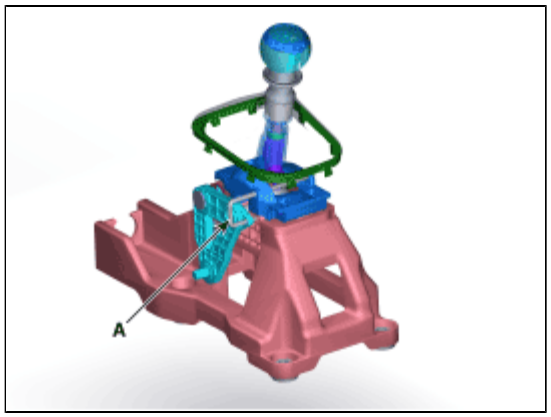


1. Install the retainer (A) and then tighten nut (B-2ea).

Tightening torque :
11.8 - 14.7 N.m (1.2 - 1.5 kgf.m, 8.7 - 10.8 lb-ft)

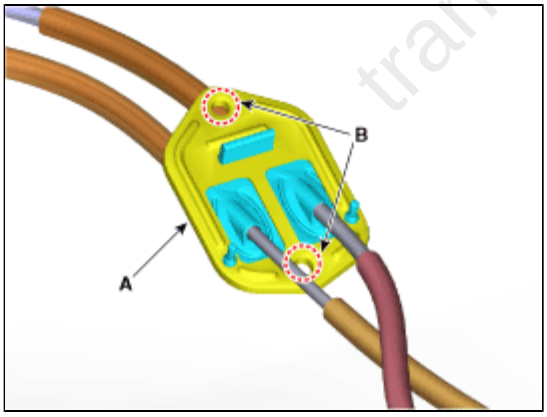


2. Install the shift cable (A).
3. Install the select cable (B).

transmissionmanuals.com

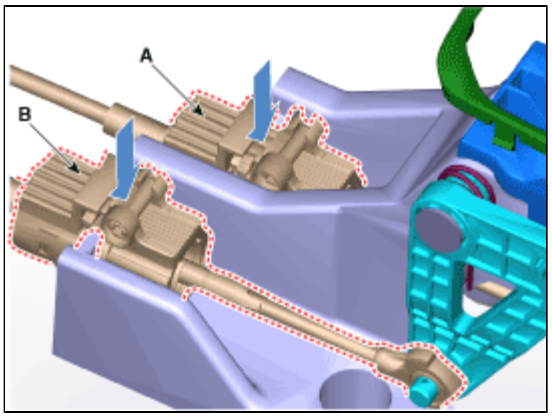

4. Install the cable end (A).

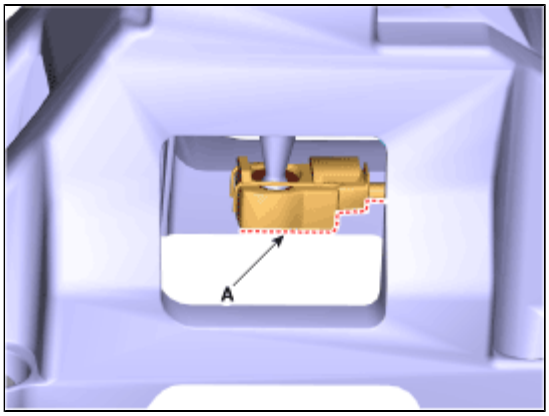


5. Install the snap pin (A).




⚠ CAUTION

â After installing the select cable and shift cable socket, check portion (A) to see if it projects outwards from ¢ the cap.

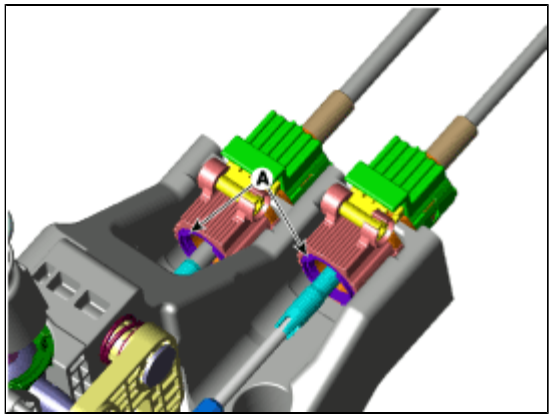


transmissionmanuals.com


6. Move the locker (B) in the direction of "F" with pulling the holder (A) in the direction of "P".

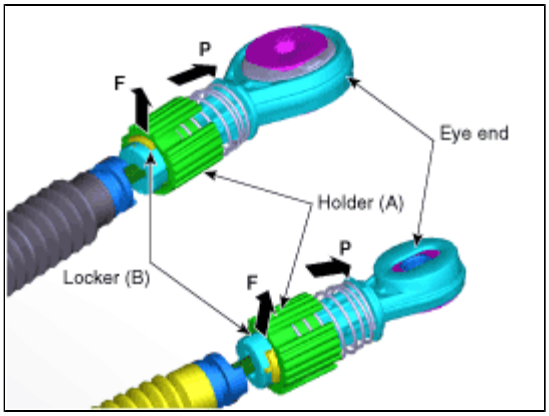


7. Install the shift cable (B) and select cable (C).

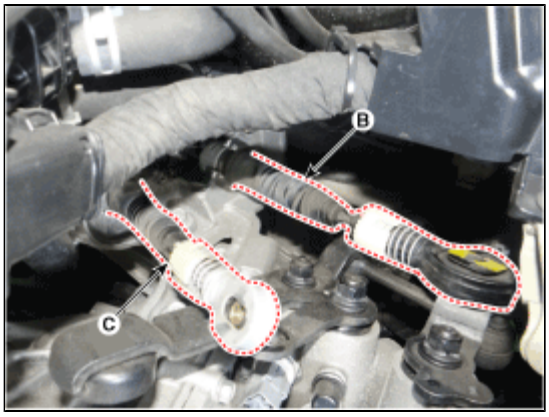

8. Tighten the holder (A) to the "P" directions after fixing the rockers (B) in the "F" direction.

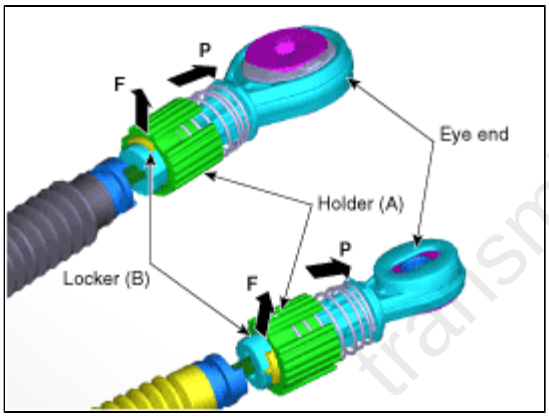


9. Install the snap pin (A-2ea).

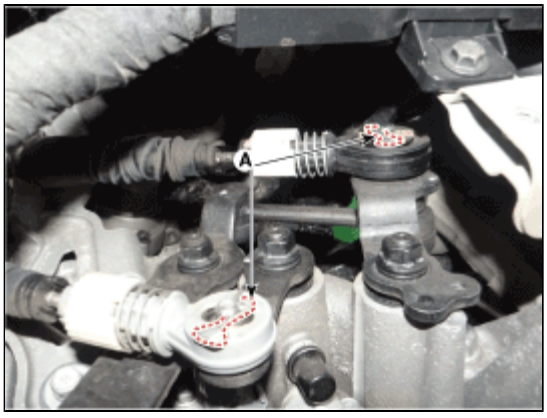

10. Remove the shift lever 4th fixed pin (A).

transmissionmanuals.com

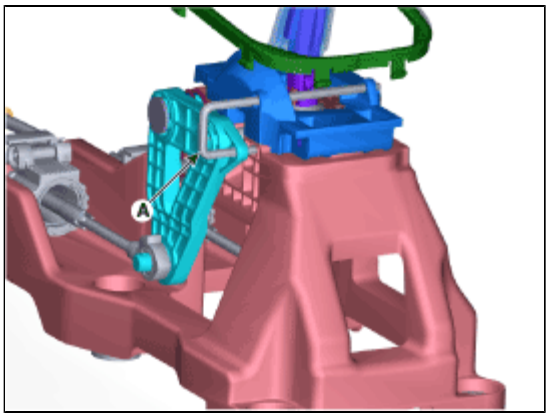

11. Install the floor console assembly.
    (Refer to Body - "Floor Console")
12. Install the battery and battery tray.
    (Refer to Engine Electrical System - "Battery")
13. Install the engine control module (ECM).
    (Refer to Engine Control System - "ECM")
14. Install the air cleaner assembly and air duct.
    (Refer to Engine Mechanical System - "Air Cleaner")

⚠ CAUTION

â Check operating of lever of transaxle side when operating shift lever after assembly. (1-6,R)
¢

â If there is sticky feel, adjust the control cable length again.
¢ (Refer to Control Cable - "Installation")

Rate this Document
□ Document Type : SHOP
□ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

transmissionmanuals.com