
Description

**Component**

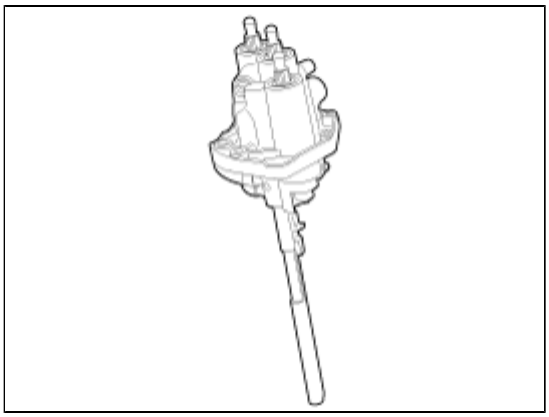

**Mounting location :** Control shaft complete is mounted on the top of the manual transaxle, and select & shift cable are equipped.

**Function :** Change the gear by shifting a shift lever.

Rate this Document

□ Document Type : SHOP

□ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

transmissionmanuals.com