

Removal

1. Set shift lever to N position.
2. Remove the air cleaner assembly.
   (Refer to Engine Mechanical System - "Air Cleaner")
3. Remove the battery and battery tray.
   (Refer to Engine Electrical System - "Battery")
4. Disconnect the back up lamp switch connector (A) and the neutral position switch (B).

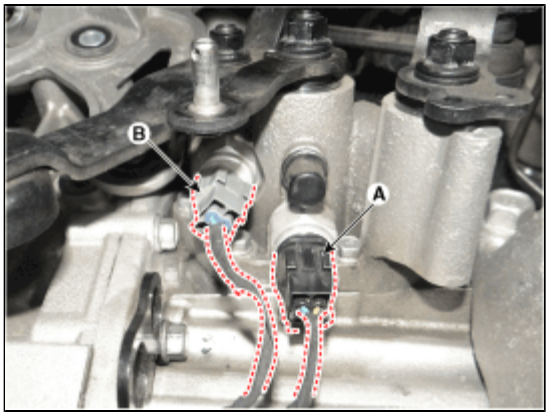


5. Separate the control cable from the control shaft complete after removing the pin (A).

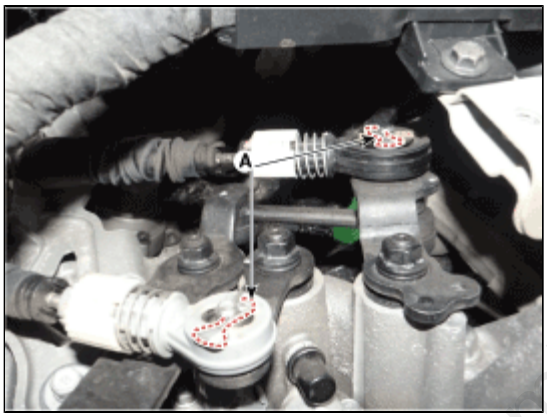

6. Remove the control shaft complete (A).

Tightening torque :
9.8 - 11.8 N.m (1.0 - 1.2 kgf.m, 7.2 - 8.7 lb-ft)

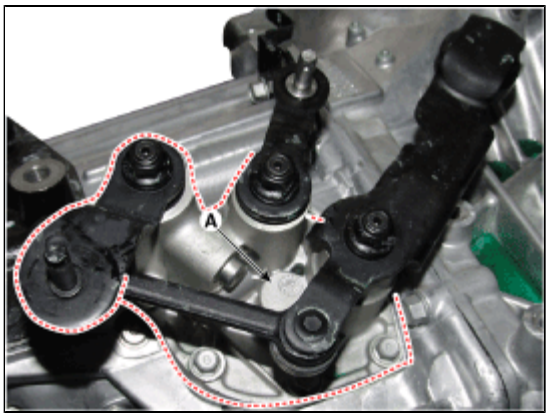

NOTICE

Removal is possible only on "N" position.

transmissionmanuals.com

Installation


1. To install, reverse the removal procedure.

NOTICE

â When installing, set control shaft lever to neutral position.
¢

â When installing, apply the sealant as shown in the illustration.
¢

Specified sealant : MS 721-40 or MS721-38

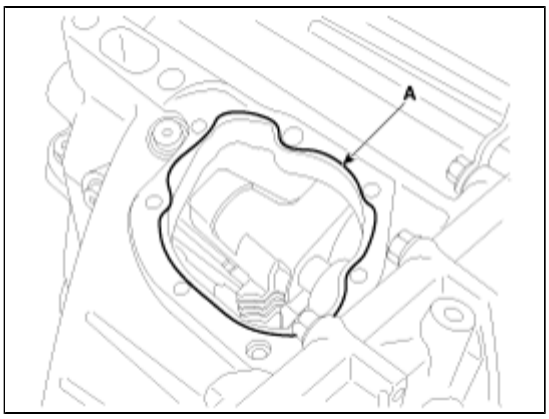

Rate this Document
□ Document Type : SHOP
□ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

transmissionmanuals.com