PUBLISHED: 28-APR-2017
2017.0 DISCOVERY (LR), 307-02

TRANSMISSION/TRANSAXLE COOLING - VEHICLES WITH: 8HP45 8-SPEED AUTOMATIC TRANSMISSION AWD

TRANSMISSION FLUID COOLER TUBES - V6 S/C 3.0L PETROL (G1509729)

REMOVAL AND INSTALLATION

44.24.15	HOSES /PIPES - OIL/FLUID COOLER - SET - RENEW	3000 CC, AJ V6 (AJ126)	2	USED WITHINS	

PART(S)

STEP	PART NAME	QUANTITY
Removal Step 7	Transmission fluid cooler tubes to transmission O-ring seals	1

REMOVAL

CAUTION:

Before disconnecting or removing the components, make sure the area around the joint faces and connections are clean and dry. Plug open connections to prevent contamination.

NOTE:

Removal steps in this procedure may contain installation details.

transmissionmanuals.com

1. Disconnect the battery ground cable.
Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

2. **WARNING:**

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

3. Refer to: Engine Undershield (501-02 Front End Body Panels, Removal and Installation).

4. Refer to: Front Driveshaft - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol (205-01 Driveshaft, Removal and Installation).


5. **WARNING:**

Be prepared to collect escaping fluids.

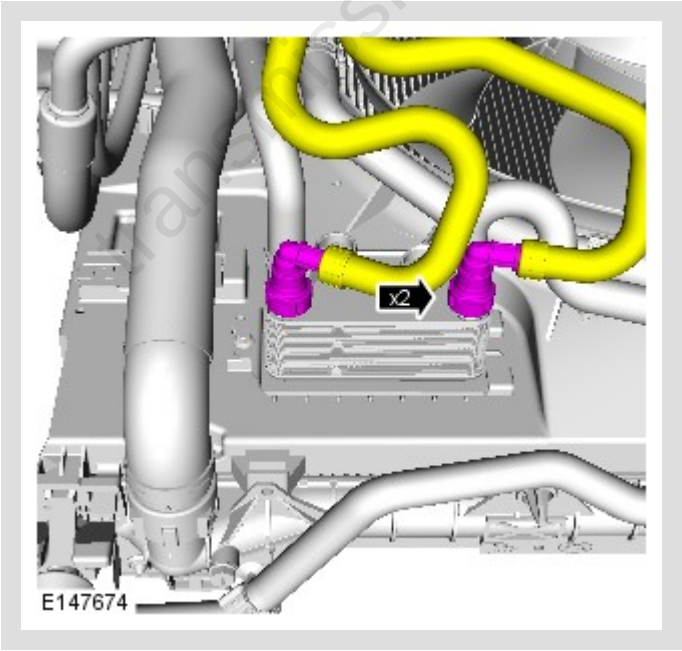

transmissionmanuals.com

6.

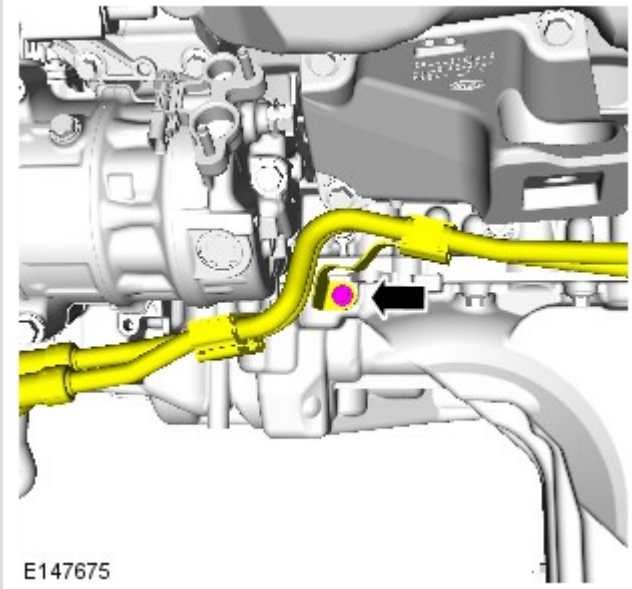


Torque: **9 Nm**

7.

CAUTION:


Be prepared to collect escaping fluids.

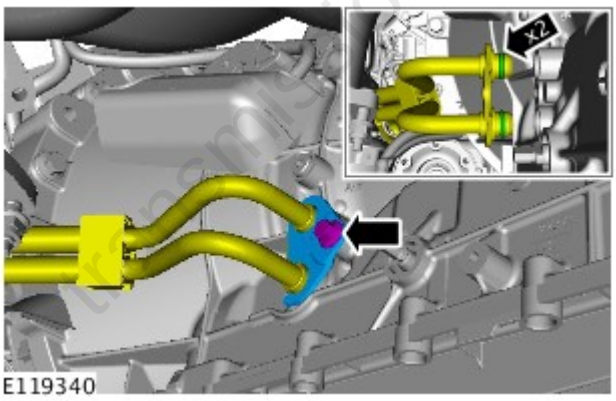

Renew Part: *Transmission fluid cooler tubes to transmission O-ring seals*
Quantity: *1* .
Torque: **25 Nm**

transmissionmanuals.com


8.

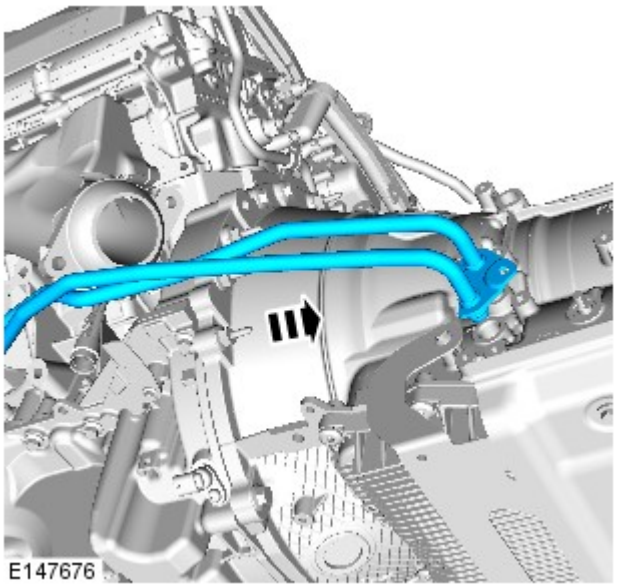

INSTALLATION

1. To install, reverse the removal procedure.

2.

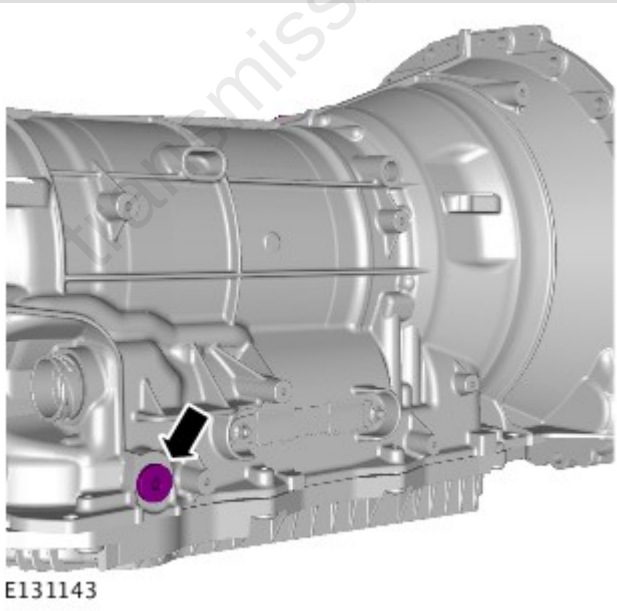

- Check and top-up the transmission fluid level.
- *Torque:* **35 Nm**

transmissionmanuals.com

transmissionmanuals.com