

(M type only)

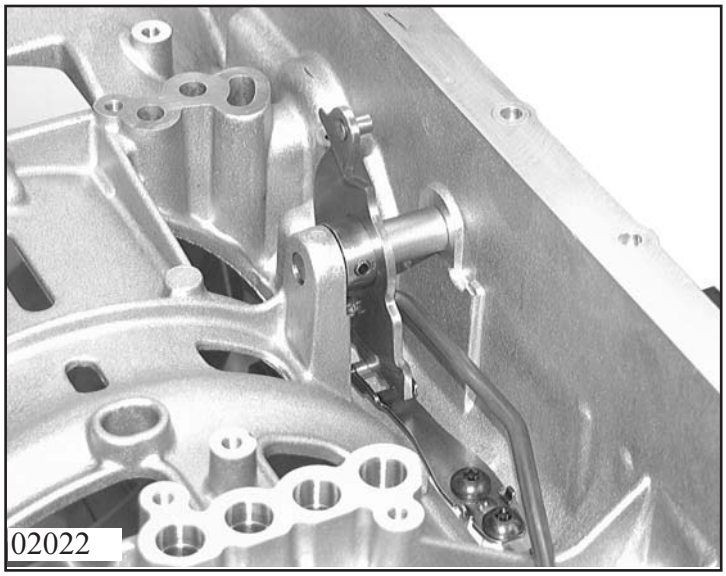


1.4.8 Switch setting (detent spring)

Set locking disk with appropriate tool or manually to N position (neutral).

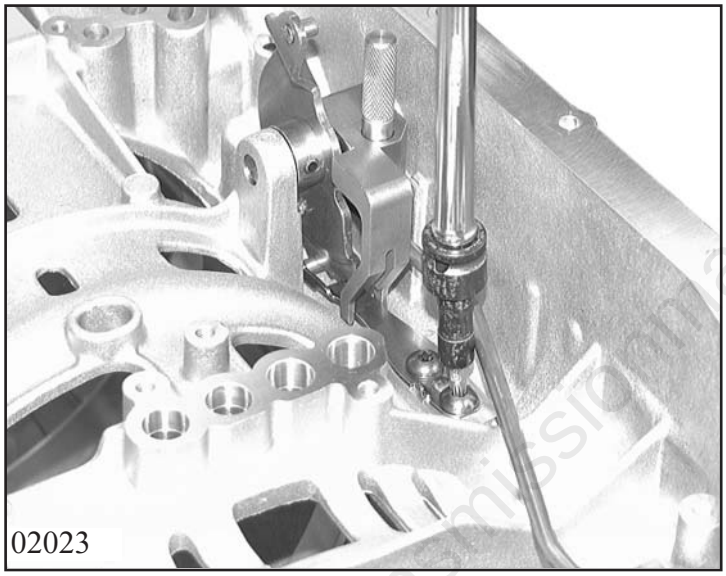

Align detent spring with centering device 5x46 002 292 and tighten detent spring in this position.
Tighten output side screw first.

(for tightening torque see Chapter 1.5)

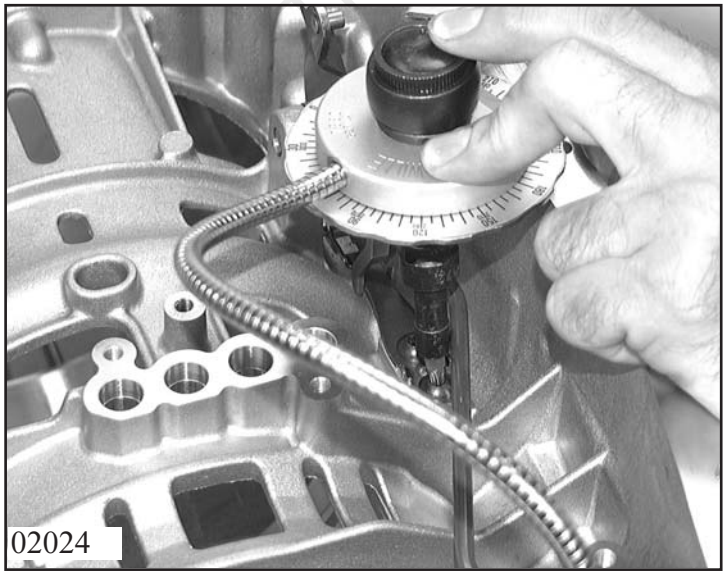

Tighten farther by the specified angle with special tool 5w04 000 583.
Remove centering device.
Shift the selector shaft through all positions and remove it again.

(for tightening torque see Chapter 1.5)

Transmissionmanuals.com

Transmissionmanuals.com