COMPONENTS LOCATION

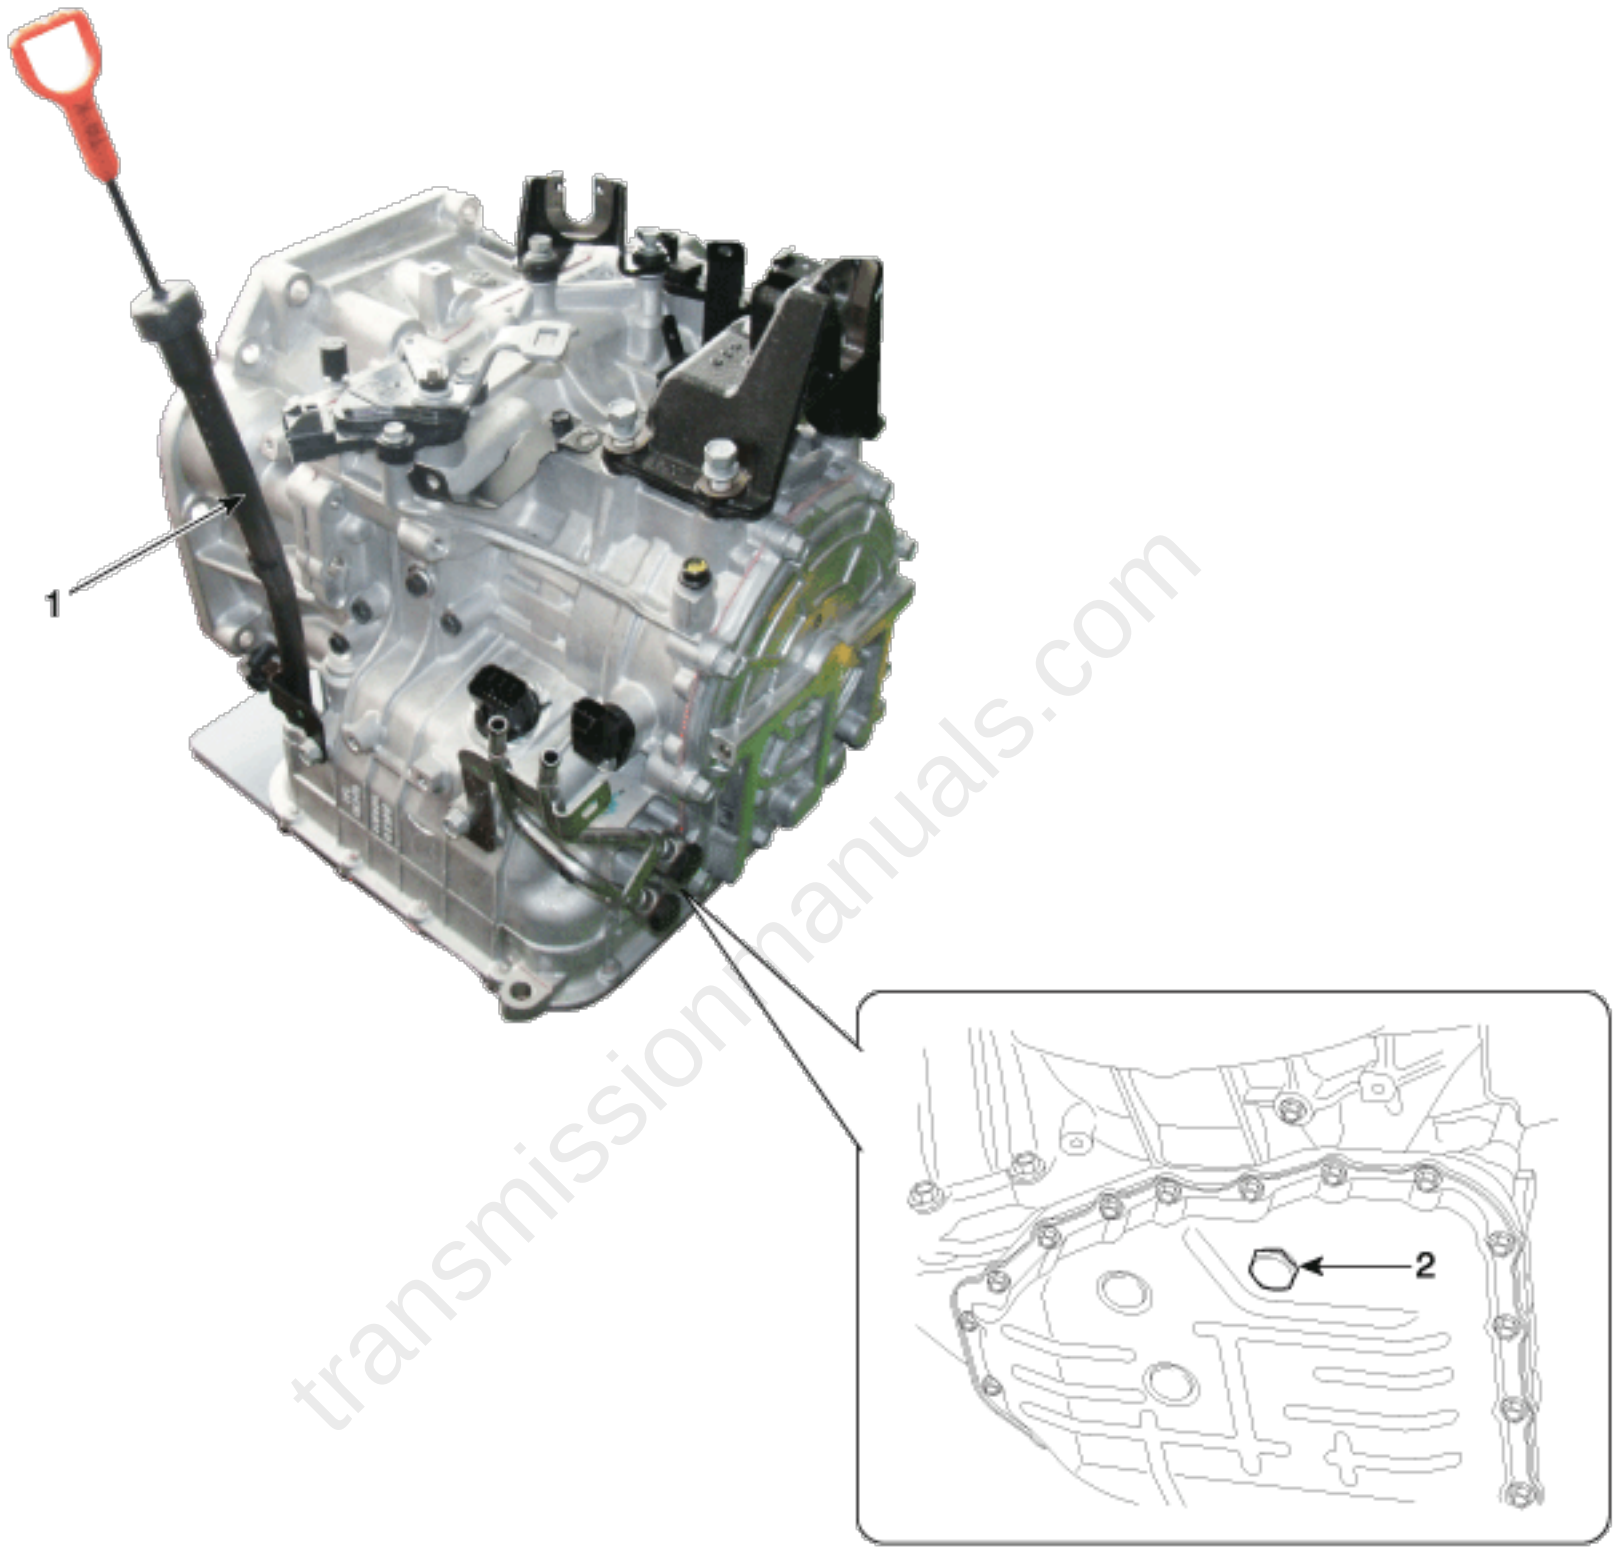

transmissionmanuals.com

1. Oil level gauge	2. Oil drain plug