

REMOVAL

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Disconnect the clutch switch connector (A).

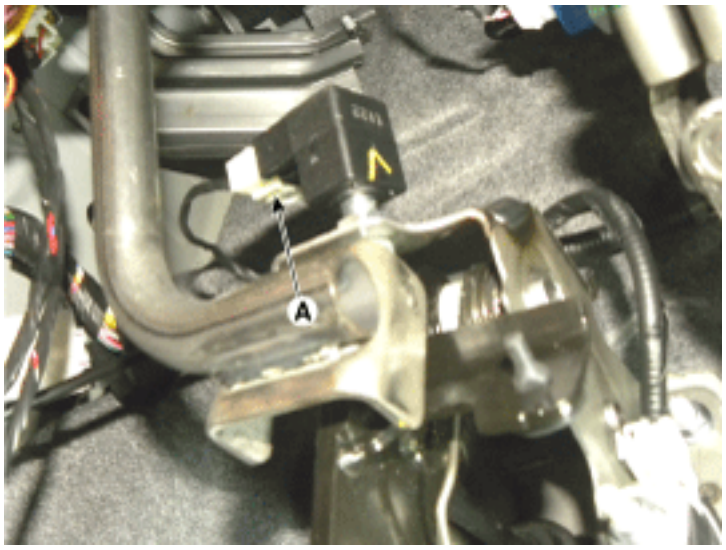

3. Remove the clutch switch (B) by loosening a nut (A).

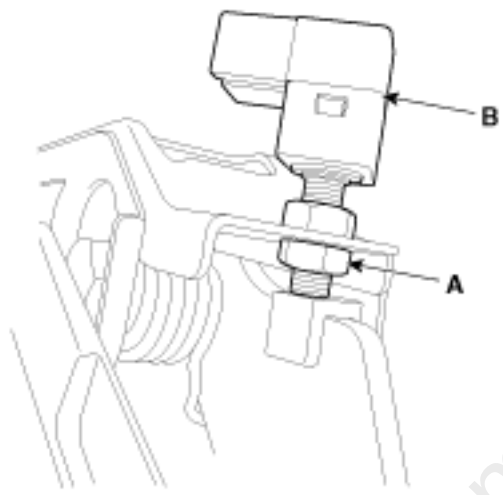

INSTALLATION

1. Install in the reverse order of removal.

ADJUSTMENT


1. Adjust the clutch switch.
   (1) Adjust the gab by rotating the adjust nut (A) to satisfy the standard gap range.

   Standard gap range:
   0.5 ~ 1.0 mm (0.0197 ~ 0.0394 in.)

   (2) Tighten the nut (B) with the specified torque.

   Tightening torque:
   11.8 ~ 14.7 N.m (1.2 ~ 1.5 kgf.m, 8.7 ~ 10.8 lb-ft)

transmissionmanuals.com

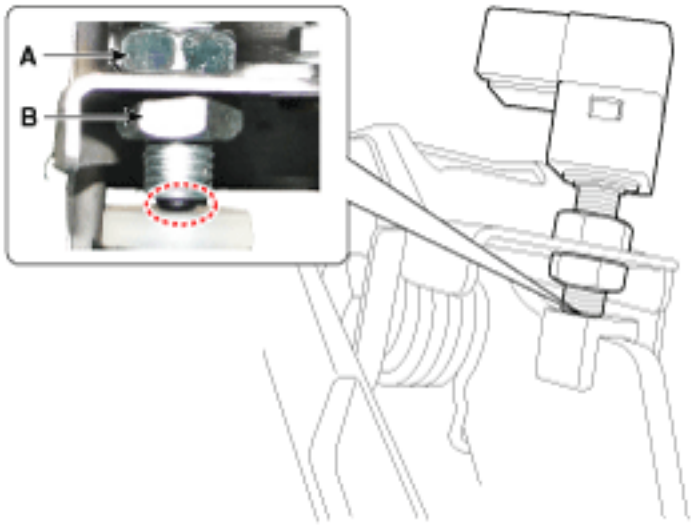

transmissionmanuals.com