


SPECIAL SERVICE TOOLS

Tool (Number and name)	Illustration	Use
09200-3N000 Engine support fixture (Beam)		Removal and installation of the transaxle. Use this adapter (SST No. : 09200-4X000) with the supporter (SST No. : 09200-A3100). ※Permit operating with 09200-38001. ※Refer to engine support fixture special tool assembly drawing below.
09200-2S000 Supporter		Removal and installation of the transaxle. Use this beam (SST No. : 09200-38001/3N000) with the supporter (SST No. :09200-2S000).
09200-4X000 Engine support fixture (Adapter)		Removal and installation of the transaxle. Use this beam (SST No. : 09200-3N000 or 38001) with the supporter (SST No. :09200-A3100). ※Refer to engine support fixture special tool assembly drawing below.
09221-03100 Engine hanger		Ring for supporting engine.
09431-23000 Oil seal installer		Installation of transaxle case oil seal. [Using with handle (SST No.:09231-H1100)]
09231-H1100 handle		Installation of transaxle case oil seal. [Using with oil seal installer (SST No.:09431-23000)]

※ Engine Support Fixture Special Tool Assembly Drawing

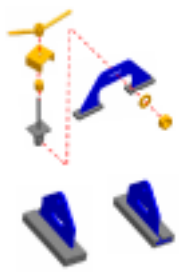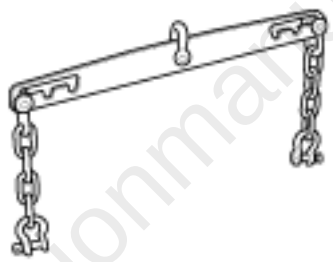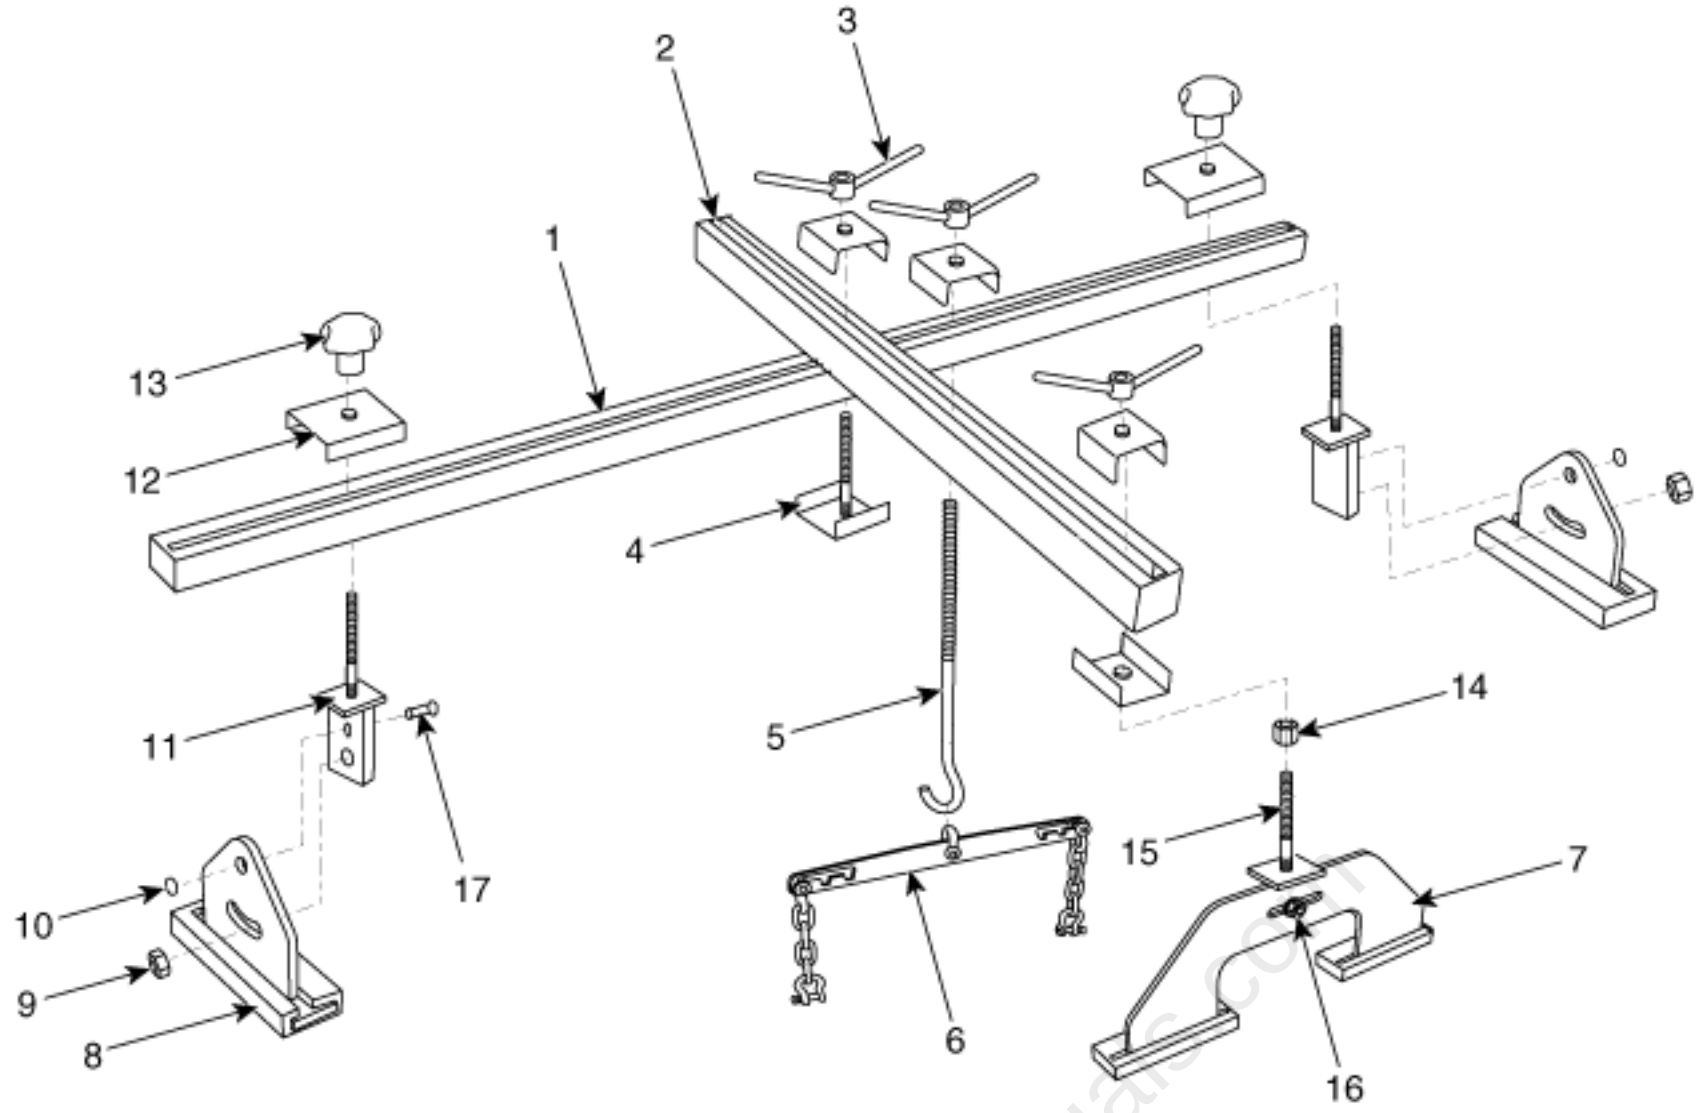

1. 09200-3N000 (Main bar)	10. 09200-3N000 (Snap ring)
2. 09200-3N000 (Sub bar)	11. 09200-3N000 (Sub fixture)
3. 09200-3N000 (Handle)	12. 09200-3N000 (Stopper)
4. 09200-3N000 (Stopper)	13. 09200-3N000 (Nut)
5. 09200-3N000 (Bolt-1)	14. 09200-2S100 (Spacer)
6. 09200-4X000 (Adapter)	15. 09200-2S100 (Sub fixture)
7. 09200-2S100 (Supporter)	16. 09200-2S100 (Nut)
8. 09200-2S200 (Supporter)	17. 09200-3N000 (Pin)
9. 09200-3N000 (Nut)	

transmissionmanuals.com