

REMOVAL

1. Remove the floor console assembly.
   (Refer to Body - " Floor Console")


2. Remove the clip (A) and then remove the select cable (B) from the shift lever.

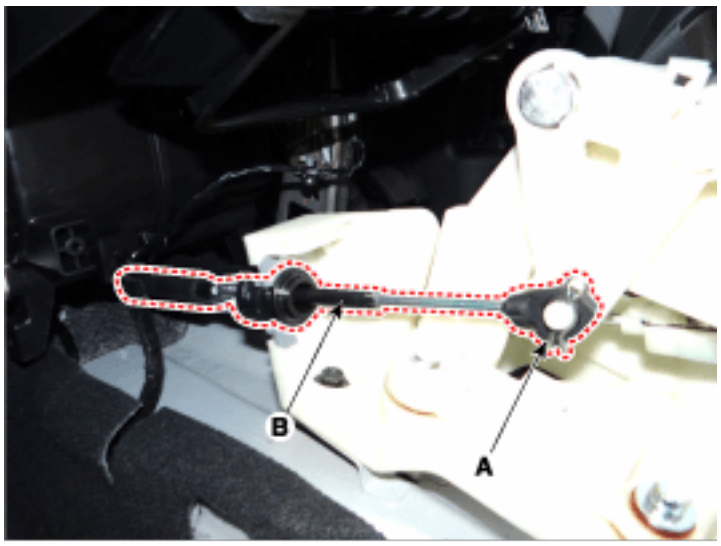


3. Remove the clip (A) and then remove the shift cable (B) from the shift lever.

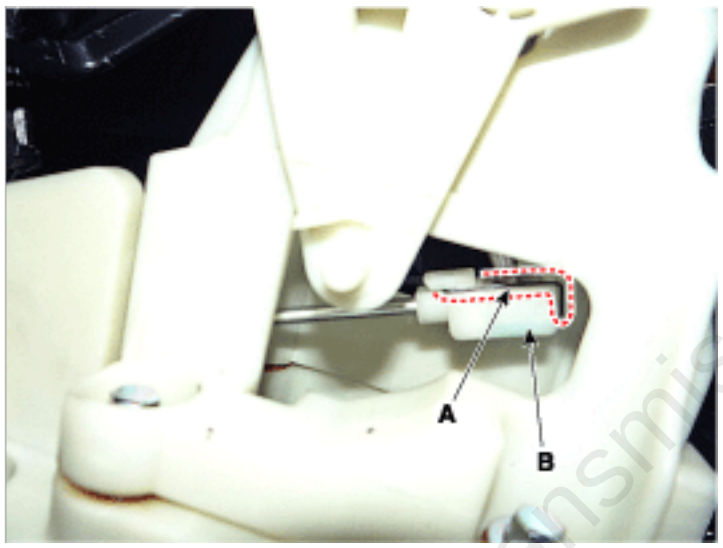

4. Remove the cable guide (A) from lever assembly.

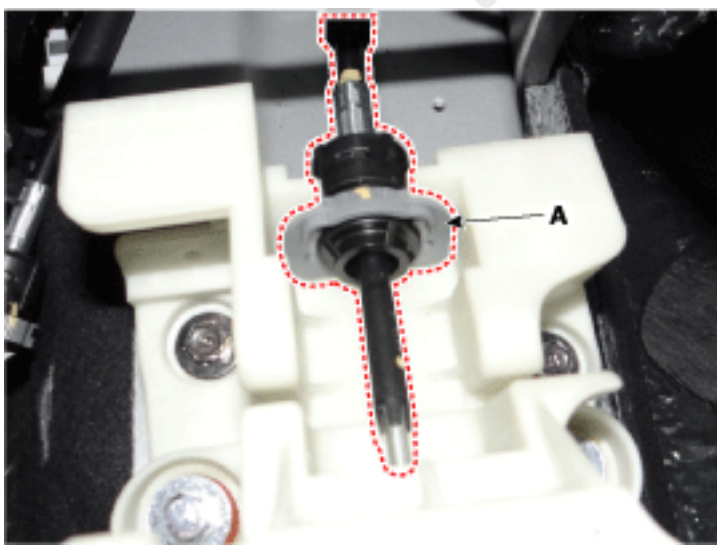


5. Remove the retainer (A) after loosen the nut.

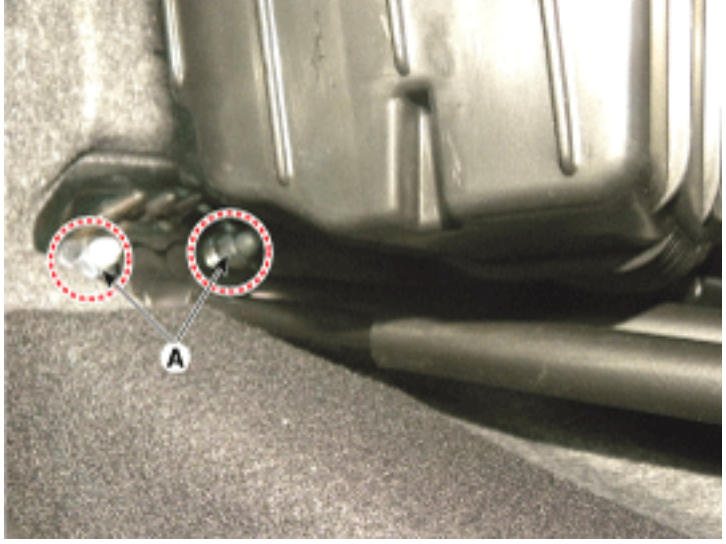


6. Air cleaner assembly.
   (Refer to Engine Mechanical System - "Air Cleaner")

7. Battery and battery tray.
   (Refer to Engine Electrical System - "Battery")

8. Remove the control cable.
   (1) Remove the pin (A) and washers.

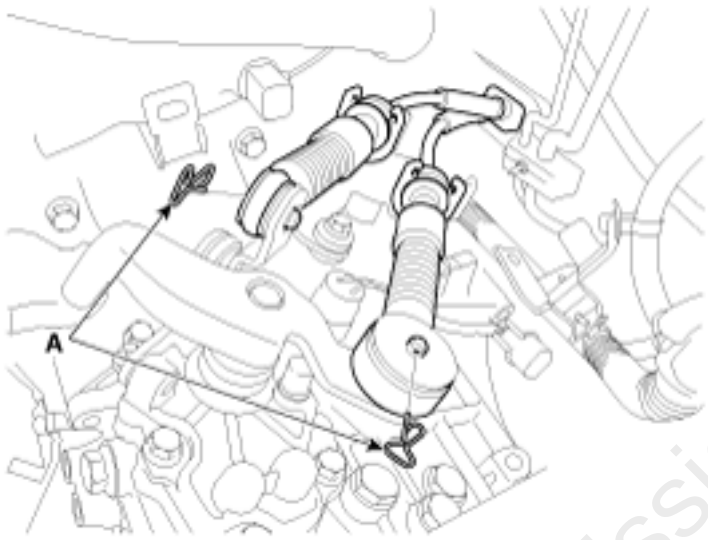

   (2) Make unlock clip (B) and then remove the shift & select cable (A) and clip from the bracket.

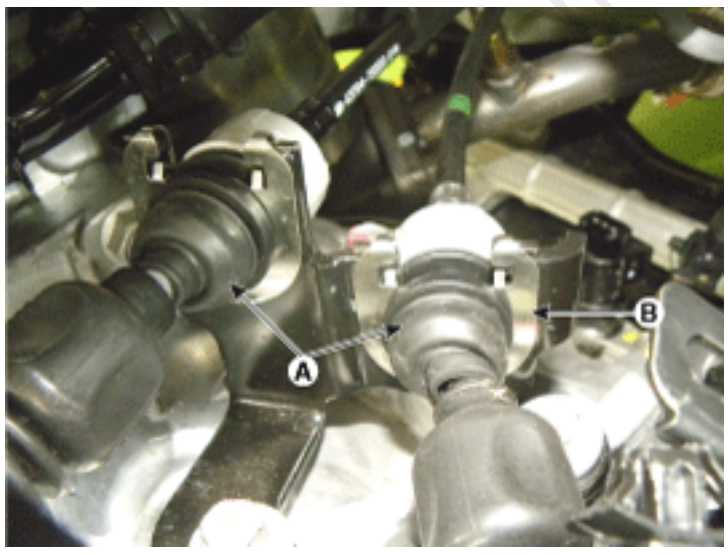

NOTICE

- Do not reuse the clip (B).

9. Remove the shift cable into the cabin room side.

INSTALLATION

1. Install in the reverse order of removal.

NOTICE

- When installing, set room side Shift lever and T/M side lever to "N" position.

INSPECTION

1. Check operating of lever of T/M side when operating shift lever after assembly.
2. When shift lever to "R" position, check the position of "skirt".

transmissionmanuals.com