
REMOVAL

1. Remove the air cleaner assembly.
   (Refer to Engine Mechanical System - "Air Cleaner")

2. Remove the battery and battery tray.
   (Refer to Engine Electrical System - "Battery")


3. Set shift lever to N position.

4. Separate the control cable from the control shaft after remove the pin (A).

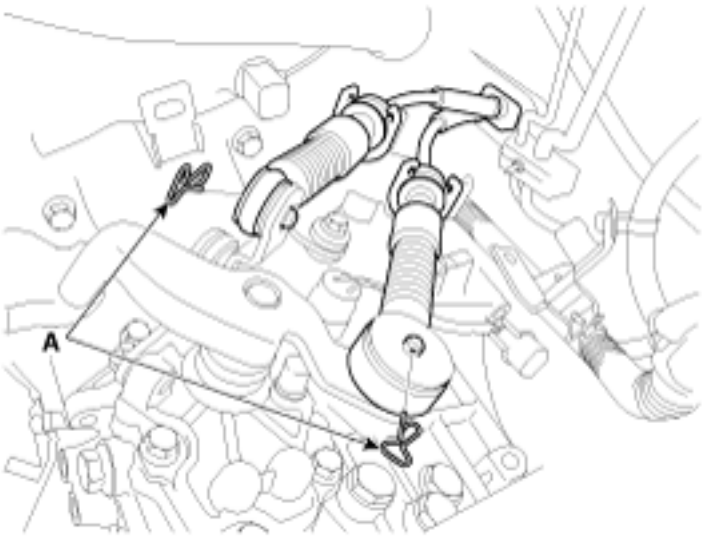


5. Remove the control shaft complete (A) after loosen the bolts.

Tightening torque:
14.7 ~ 21.6 Nm, 1.5 ~ 2.2 kgf.m, 10.9 ~ 15.9 lb-ft)

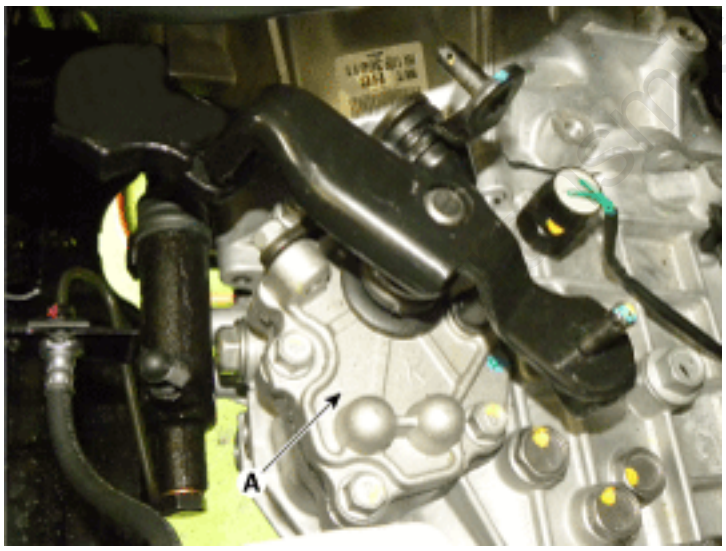

6. Remove the neutral return spring (A).

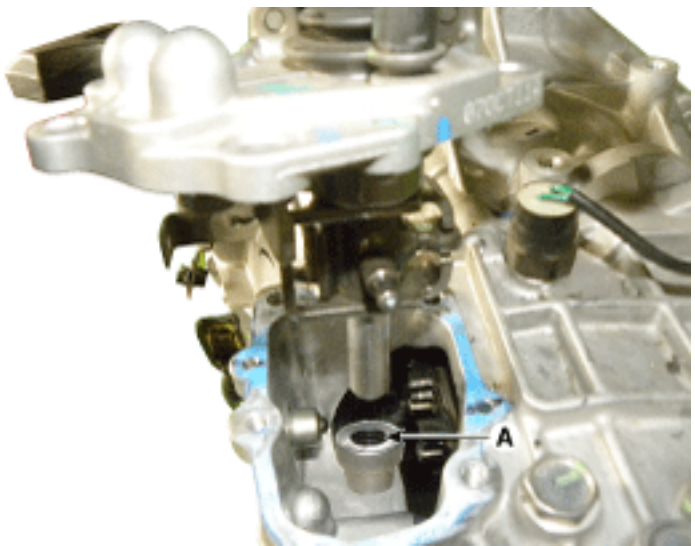

INSTALLATION

1. Install in the reverse order of removal.

> **NOTICE**
>
> - When installing, set control shaft lever to neutral position.
> - Install the control shaft complete after spreading sealant (MS 721-40 or MS721-38) to touching surface of control shaft complete and transaxle assembly.

2. After installing, check to be sure that this part operates as designed at each range of T/M side corresponding to each position of shift lever.

transmissionmanuals.com