REMOVAL

1. Remove the shift lever knob (A) by Rotating counter-clockwise.




2. Remove the upper cover&boots (A).




3. Remove the floor console assembly.
   (Refer to Body - " Floor Console")

4. Remove the clip (A) and then remove the select cable (B) from the shift lever.

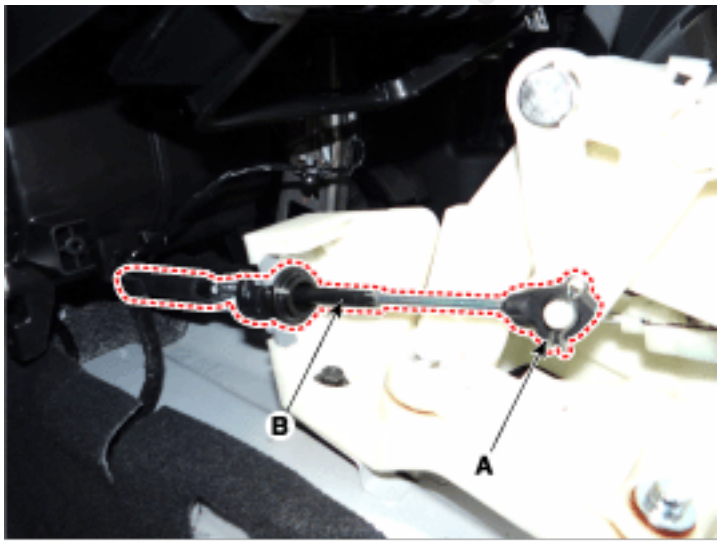


5. Remove the clip (A) and then remove the shift cable (B) from the shift lever.

transmissionmanuals.com

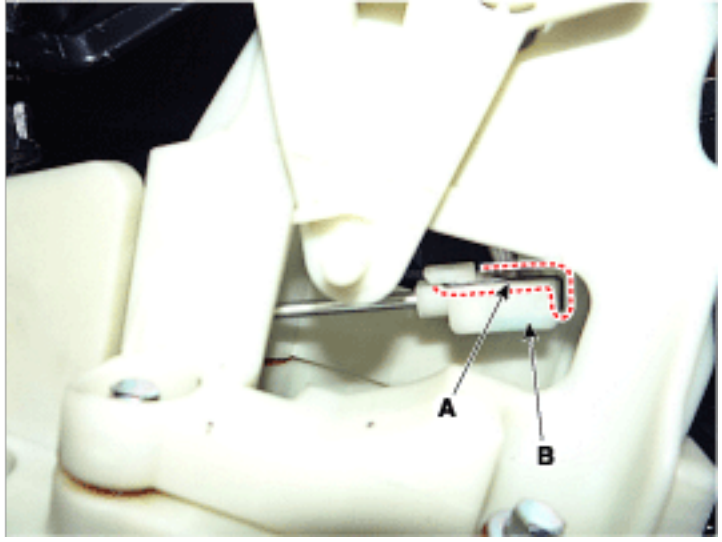


6. Remove the cable guide (A) from lever assembly.

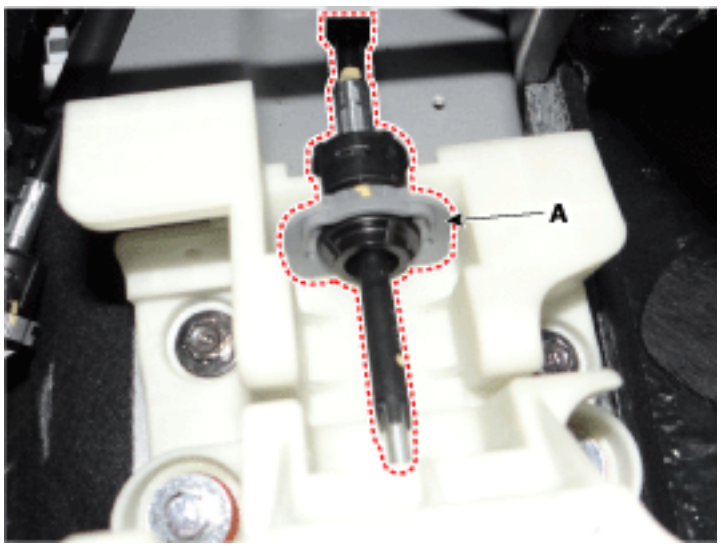

7. Remove the shift lever (A) after removing the mounting bolts.

Tightening torque :

9.8 ~ 14.7 N.m (1.0 ~ 1.5 kgf.m, 7.2 ~ 10.8 lb-ft)

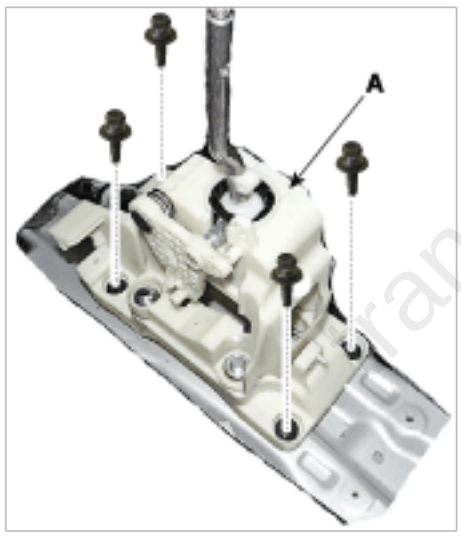

INSTALLATION

1. Install in the reverse order of removal.

> **NOTICE**
>
> - When installing, set room side Shift lever and T/M side lever to "N" position.

INSPECTION

1. Check operating of lever of T/M side when operating shift lever after assembly.
2. When shift lever to "R" position, check the position of "skirt".

transmissionmanuals.com