
INSPECTION

1. Remove the air cleaner assembly.
   (Refer to Engine Mechanical System - "Air Cleaner")

2. Remove the battery and battery tray.
   (Refer to Engine Electrical System - "Battery")


3. Disconnect the back up lamp switch connector (A).

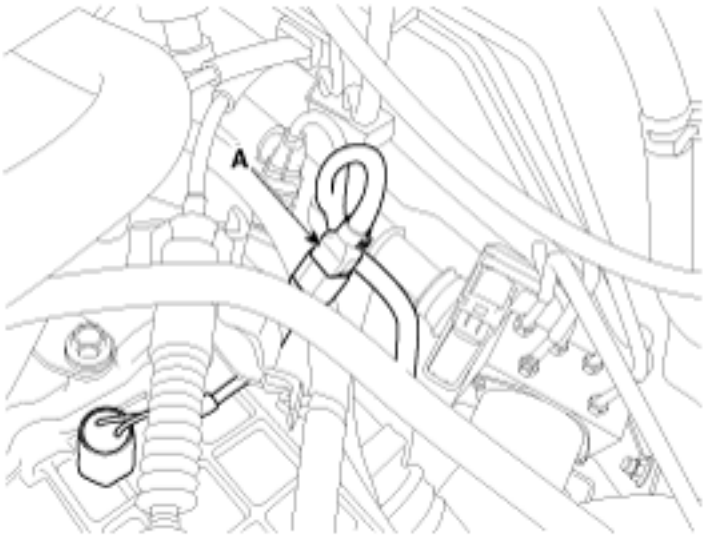

4. Check the continuity between no. 1 and 2 terminals of backup lamp switch. When the shift lever is in reverse, there should be continuity.

Condition	1	2
Reverse Range	●	●
Other Range		

*The back up Lamp "ON" shall keep over 0.5mm(0.02in) From ON-OFF poinrt.

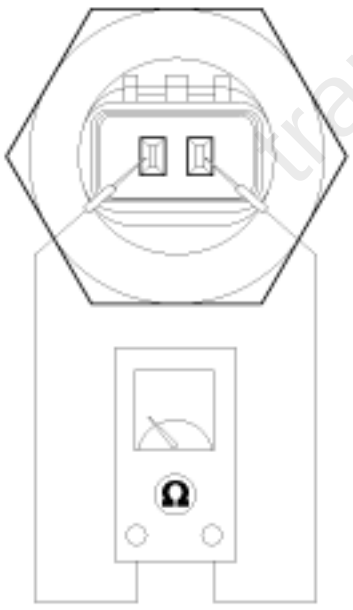


REPLACEMENT

1. Remove the air cleaner assembly.
   (Refer to Engine Mechanical System - "Air Cleaner")


2. Remove the battery and battery tray.
   (Refer to Engine Electrical System - "Battery")

3. Disconnect the back up lamp switch connector (A).

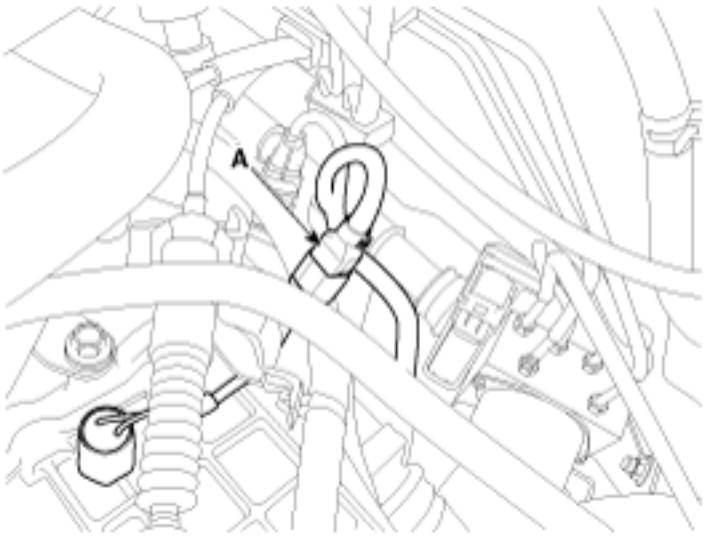

4. Remove the back up lamp switch (A) and then replace the switch.

Tightening torque:
29.4 ~ 34.3 N.m (3.0 ~ 3.5 kgf.m, 21.7 ~ 25.3 lb-ft)

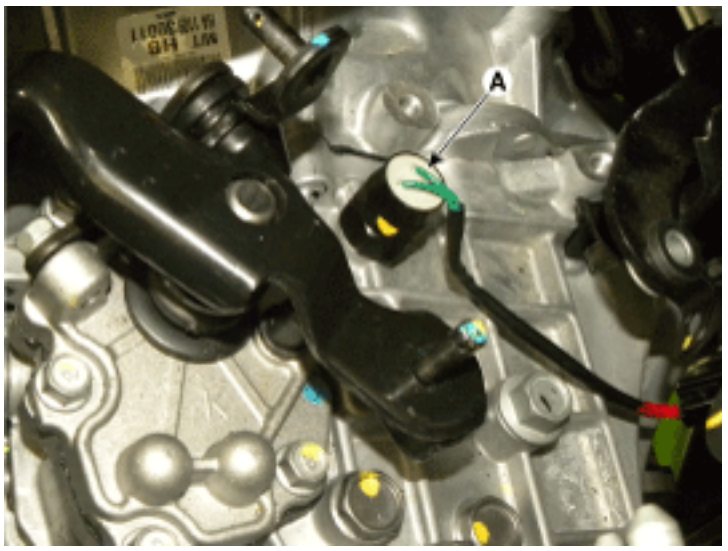

transmissionmanuals.com