
INSPECTION

1. Uplift the vehicle with lift.
2. Loosen the filler plug (A).



3. Check the oil level.

> **Information**
>
> Oil level must be up to fill the hole, if not, add oil until it runs over.

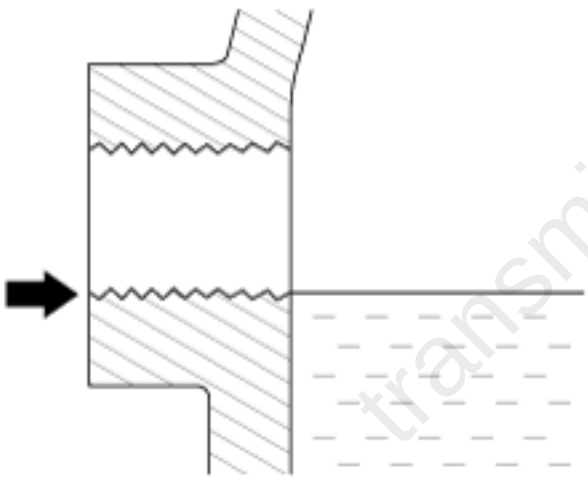


4. Install the filler plug.

Tightening torque:
58.9 ~ 78.5 N.m (6.0 ~ 8.0 kgf.m, 43.4 ~ 57.8 lb-ft)

REPLACEMENT

1. Uplift the vehicle with lift.
2. Drain the manual transaxle oil after loosening the drain plug (A).

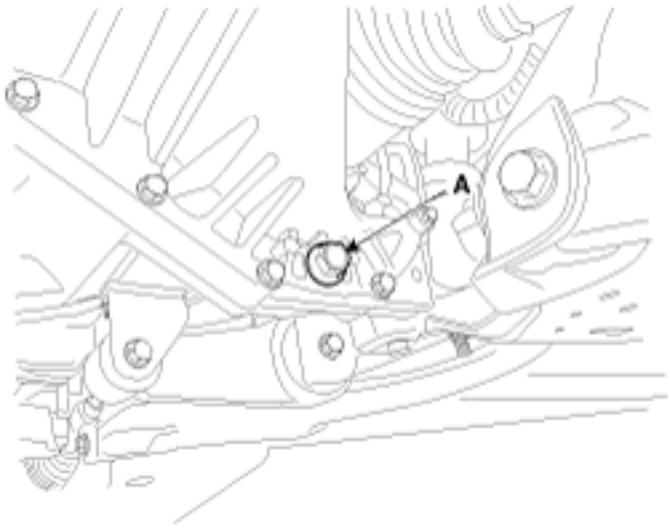

3. Install the drain plug with new gasket.

4. Loosen the oil level filler plug (A).



5. Add new oil through the filler plug hole.

Standard oil: API Service GL-4, SAE 70W (SHELL : SPIRAX S6 GHME 70W, SK : HK MTF 70W , GS CALTEX : GS MTF HD 70W)
Oil capacity: 1.9 ~ 2.0 L (0.50 ~ 0.53 U.S.gal., 2.01 ~ 2.11 U.S. qt., 1.67 ~ 1.76 lmp qt.)

6. Install the filler plug.

Tightening torque:
58.9 ~ 78.5 N.m (6.0 ~ 8.0 kgf.m, 43.4 ~ 57.8 lb-ft)

transmissionmanuals.com