


2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:

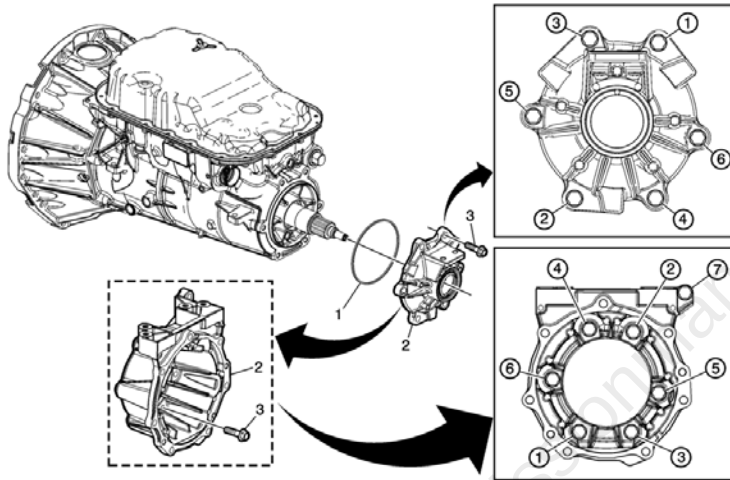

Case Extension Assembly Installation

Callout

Component Name

- 1 NEW Case Extension Seal
- 2 Case Extension 2WD or Transfer Case Adapter 4WD
- Tip:** Optional AWD version uses same bolts and torque sequence.

Bolts M10 x 40

Caution: Refer to Fastener Caution.

Procedure

- 3
- Install Case Extension 2WD – Qty: 6 Bolts
 - Install Transfer Case Adapter 4WD – Qty: 7 Bolts
 - Tighten in sequence shown.
- Tighten**
55 Y (41 lb ft)