


## 2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:  
Fuel Delivery: | Fuel:

### Removal Procedure

**Note:** When performing the following service procedures, use only hand tools to remove and install the fill or drain plugs.

1. Raise the vehicle. Refer to Lifting and Jacking the Vehicle.

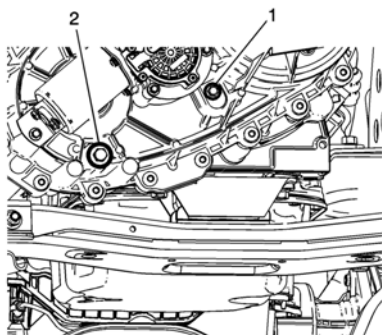


2. Remove the fill plug (1) from the transfer case.

**Note:** When draining the transfer case, make sure that an approved drain pan is used.

3. Remove the drain plug (2) from the transfer case.

### Installation Procedure

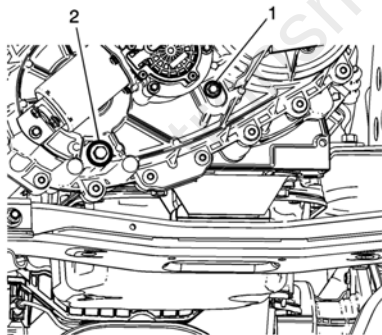

**Caution:** Refer to Fastener Caution.

1. Apply pipe sealant to the threads on the drain plug (2).
2. Install the drain plug in the transfer case and tighten the drain plug to **30 Y (22 lb ft)**.
3. Fill the transfer case to the bottom of the fill hole with the proper fluid. Refer to Adhesives, Fluids, Lubricants, and Sealers.
4. Apply pipe sealant to the threads on the fill plug (1).
5. Install the fill plug and tighten to **12 Y (106 lb in)**.
6. Lower the vehicle.