


2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:


[Removal Procedure](#)

1. Remove the instrument lower panel.

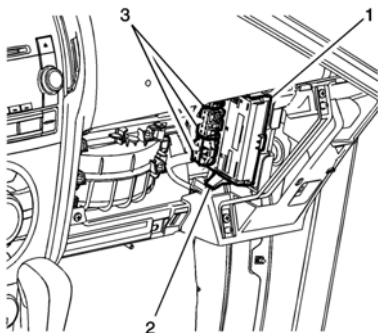

2. Disconnect the electrical connectors (3) from the transfer case control module (TCCM).
3. Press the retaining tab (2) downward to release the TCCM.
4. Remove the TCCM from the vehicle.

[Installation Procedure](#)

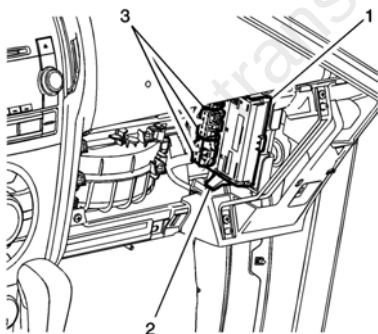

1. Press the retaining tab (2) downward, then install the TCCM.
2. Connect the electrical connectors (3) to the TCCM.
3. Install the instrument lower panel.
4. Reprogram the TCCM. Refer to Control Module References.