


## 2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:

### [Removal Procedure](#)


1. Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle.

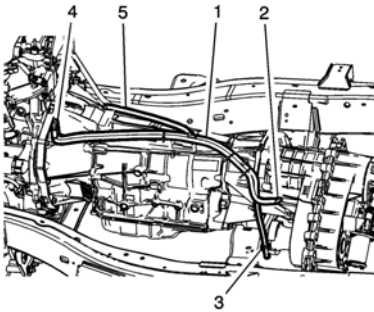

2. Disconnect the transfer case vent hose assembly (1) from the following:

- The transfer case vent pipe (2)
- The transmission crossmember (3)
- The engine compartment bracket (4)
- The transmission vent pipe (5)
- Remove the wire ties and separate the transfer case vent hose from the transmission vent hose.

### [Installation Procedure](#)

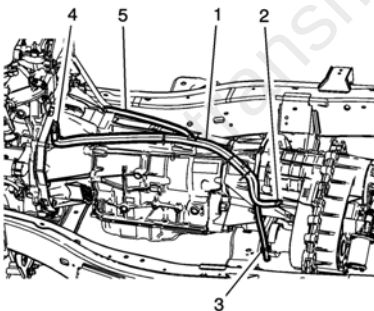

**Important:** Ensure the vent hoses are free of kinks and routed clear of sharp objects.

1. Install the wire ties to attach the transfer case vent hose to the transmission vent hose.
2. Connect the transfer case vent hose assembly (1) to the following:

- The transfer case vent pipe (2)
- The transmission crossmember (3)
- The engine compartment bracket (4)
- The transmission vent pipe (5)
- Lower the vehicle.