


2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:


[Removal Procedure](#)

1. Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle.

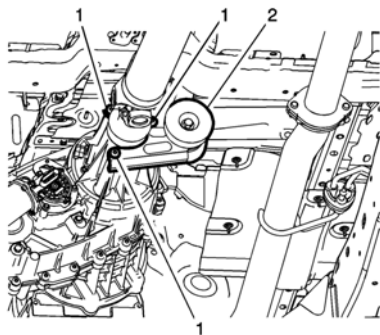

2. Remove the vibration dampener fasteners (1).
3. Remove the vibration dampener (2) from the transfer case.

[Installation Procedure](#)

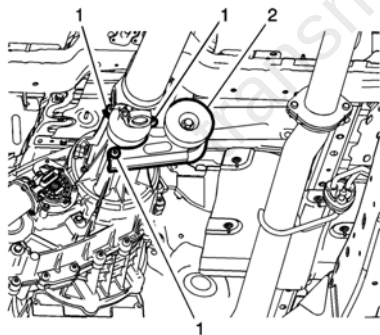

1. Position the vibration dampener (2) on the transfer case.

Caution: Refer to Fastener Caution.

2. Install the vibration dampener fasteners (1) and tighten to **25 Y (18 lb ft)**.
3. Lower the vehicle.