


2013 Chevrolet Colorado


Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:

[Removal Procedure](#)

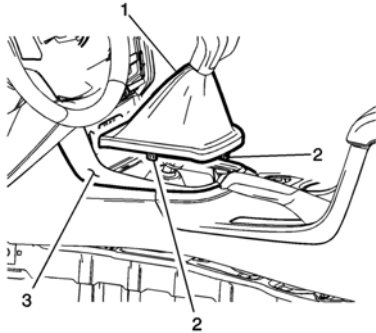


1. Using a flat bladed trim tool, carefully release the four retaining tabs on each side of the boot (1) in order to disengage the boot retainers (2) from the floor console (3).
2. Pull the boot upward to access the control lever set screw.

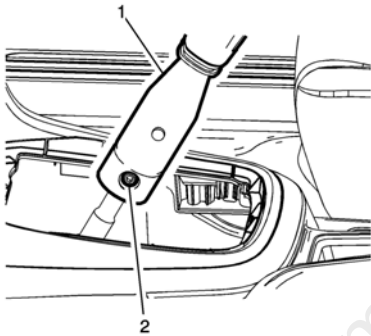

3. Remove the set screw (2) from the shift lever (1).
4. Remove the shift lever assembly from the transmission control lever.
5. If necessary, remove the shift lever boot from the control lever.

[Installation Procedure](#)


1. If removed, install the shift lever boot to the control lever.

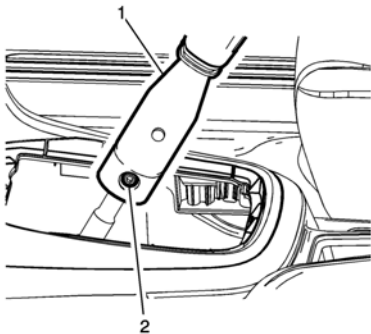

2. Install the control lever and boot assembly to the transmission control lever, aligning the set screw (2) threaded hole with the flat on the transmission control lever.
3. Apply threadlock to the shift lever set screw threads. Refer to Adhesives, Fluids, Lubricants, and Sealers.

Caution: Refer to Fastener Caution.

4. Install the shift lever set screw and tighten to **25 Y (18 lb ft)**.

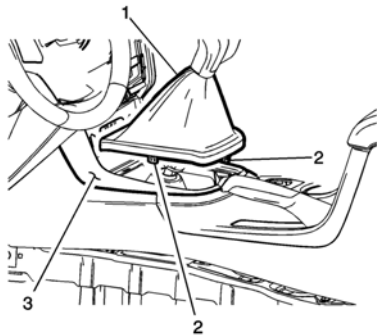

5. Position the boot tabs (2) flat on the console opening.
6. Push downward on all four sides of the boot (1) in order to engage the boot retainers (2) with the floor console (3).