



2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:
Fuel Delivery: | Fuel:

[Removal Procedure](#)

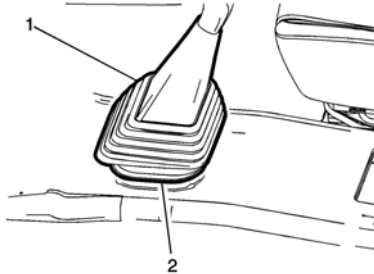


1. Carefully pull the shift boot (1) sideways, then upward to release the boot from the floor panel retaining flange (2).
2. Pull the boot upward to access the control lever set screw.

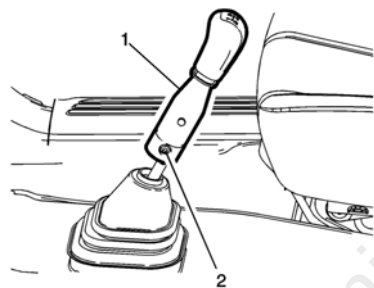

3. Remove the set screw (2) from the shift lever (1).
4. Remove the shift lever assembly from the transmission control lever.
5. If necessary, remove the shift lever boot from the control lever.

[Installation Procedure](#)


1. If removed, install the shift lever boot to the control lever.

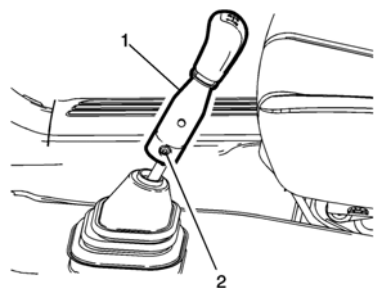

2. Install the control lever and boot assembly to the transmission control lever, aligning the set screw (2) threaded hole with the flat on the transmission control lever.
3. Apply threadlock to the shift lever set screw threads. Refer to Adhesives, Fluids, Lubricants, and Sealers.

Caution: Refer to Fastener Caution.

4. Install the shift lever set screw and tighten to **25 Y (18 lb ft)**.

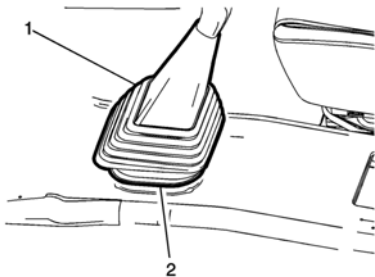

5. Carefully pull the shift boot (1) sideways, then downward to secure the boot to the floor panel retaining flange (2).