


2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:


[Removal Procedure](#)

1. Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle.

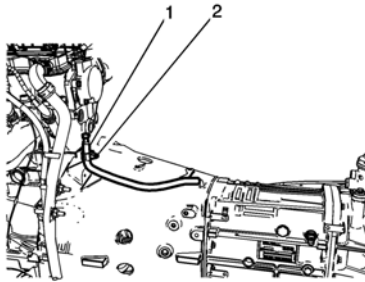

2. Disconnect the transmission vent hose assembly (1) from the engine compartment bracket (2).
3. Disconnect the transmission vent hose assembly (1) from the transmission.
4. Remove the transmission vent hose assembly (1) from the vehicle.

[Installation Procedure](#)

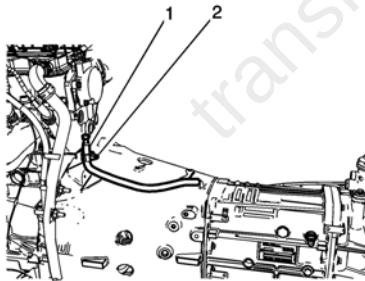

Important: Ensure the vent hoses are free of kinks and routed clear of sharp objects.

1. Connect the transmission vent hose assembly (1) to the engine compartment bracket (2).
2. Connect the transmission vent hose assembly (1) to the transmission.
3. Lower the vehicle.