


2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:
Fuel Delivery: | Fuel:

[Removal Procedure](#)


1. Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle.

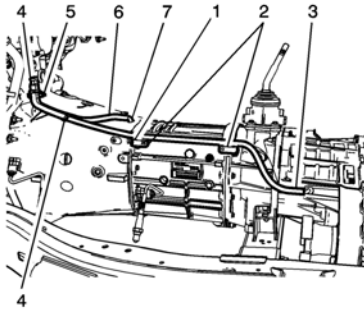

2. Disconnect the transmission vent hose assembly (6) from the following:

- The engine compartment bracket (5)
- The transmission vent pipe (7)
- Cut the wire ties (4).
- Remove the transmission vent hose (6) from the vehicle.

[Installation Procedure](#)

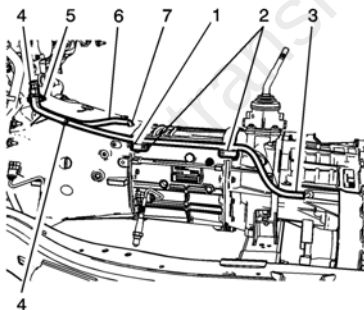

Important: Ensure the vent hoses are free of kinks and routed clear of sharp objects.

1. Install the wire ties (4) to attach the transmission case vent hose (1) to the transfer case vent hose (7).
2. Connect the transfer case vent hose assembly (1) to the following:

- The transmission vent pipe (7)
- The engine compartment bracket (5)
- Lower the vehicle.