


2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:


Fuel Delivery: | Fuel:

Removal Procedure

1. Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle.

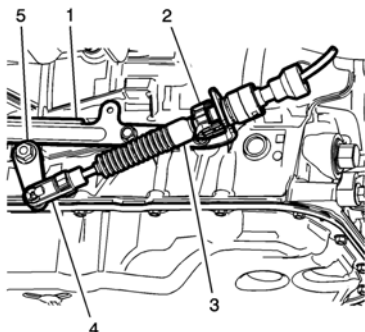


2. Using a flat bladed tool, remove the automatic transmission range selector cable terminal (4) from the automatic transmission range selector lever (5).
3. Pull the locking clip (2) in order to release the range selector lever cable (3) from the cable bracket (1).
4. Remove the automatic transmission range selector cable (3) from the automatic transmission range selector cable bracket (1).
5. Lower the vehicle.
6. Using wheel chocks, block the tires.
7. Remove the front floor console.
8. Remove the transmission control from the vehicle. Refer to Transmission Control Replacement.

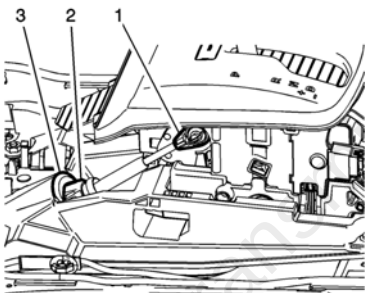


9. Using a flat bladed tool, disconnect the cable terminal (1) from the transmission control shift pin.
10. Compress the two retaining tabs (2) and remove the automatic transmission range selector cable from the transmission control.

Installation Procedure

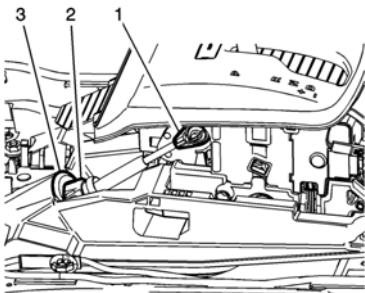

1. install the automatic transmission range selector cable grommet (3) to the transmission control assembly.
2. Securely seat the cable retainer (2) in the transmission control assembly.

3. Connect the cable end (1) to the transmission control shift pin.
4. Install the transmission control in the vehicle. Refer to Transmission Control Replacement.
5. Install the front floor console.
6. Raise the vehicle.

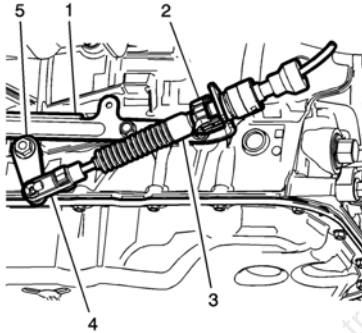

7. Properly route and position the automatic transmission range selector cable (3) to the transmission shift cable bracket (1).
8. Install the automatic transmission range selector cable terminal (4) to the transmission control shift lever pin (5).
9. Install the automatic transmission range selector cable retainer (2) to the transmission cable bracket (1).
10. Adjust the automatic transmission range selector cable. Refer to Range Selector Lever Cable Adjustment.