

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:


Special Tools

DT-50575 Transfer Case Rear Bushing Remover and Installer

For equivalent regional tools, refer to Special Tools.

[Removal Procedure](#)


1. Remove the rear output shaft seal. Refer to Rear Output Shaft Seal Replacement.

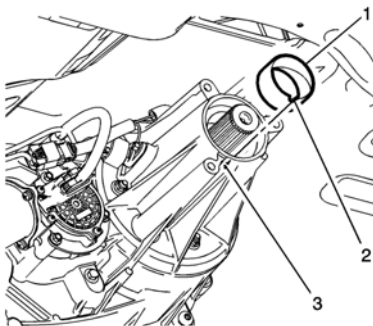

Note: Only replace the rear output shaft bushing if it is worn or scored.

2. Install the finger section of DT-50575 remover and installer in front of the bushing (1).
3. Install the tube and forcing tube assembly into the finger section. Ensure the forcing screw is backed out.
4. Using a wrench on the forcing screw, remove the bushing.

[Installation Procedure](#)

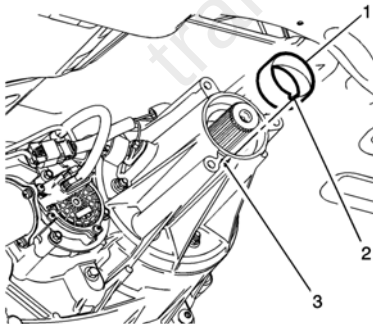

Note: The notched area of the bushing (2) should face the rear output shaft seal and be aligned with the rib of the transfer case.

1. Using DT-50575 remover and installer, install the bushing.
2. Install the rear output shaft seal. Refer to Rear Output Shaft Seal Replacement.