


2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:
Fuel Delivery: | Fuel:


Removal Procedure

1. Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle.
2. Disconnect the electrical connector from the actuator motor.

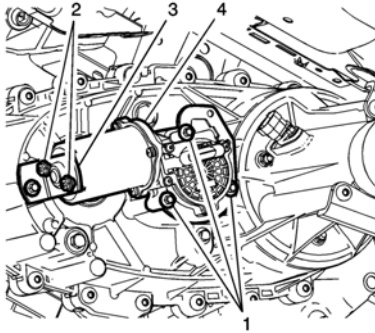

3. Remove the four actuator motor fasteners (1).
4. Remove the actuator motor (4) from the transfer case.
5. Remove the actuator motor bracket fasteners (2).
6. Remove the bracket (3) from the actuator motor (4).

Installation Procedure

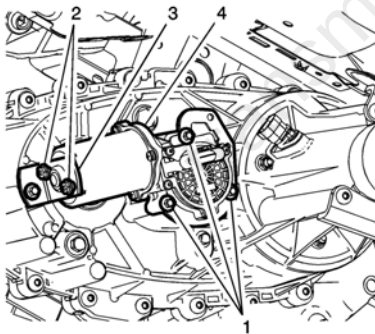

1. Position the bracket (3) on the actuator motor (4).

Caution: Refer to Fastener Caution.

2. Install the bracket fasteners (2) and tighten to **8 Y (70 lb in)**.
3. Install the actuator motor (4) on the transfer case.
4. Install the actuator motor fasteners (1) and tighten to **12 Y (106 lb in)**.
5. Connect the electrical connector to the actuator motor.
6. Lower the vehicle.
7. Verify correct operation of the actuator motor.
8. Reprogram the transfer case control module. Refer to Control Module References.