


2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:


Fuel Delivery: | Fuel:

[Removal Procedure](#)

1. Remove the front floor console. Refer to Front Floor Console Replacement.

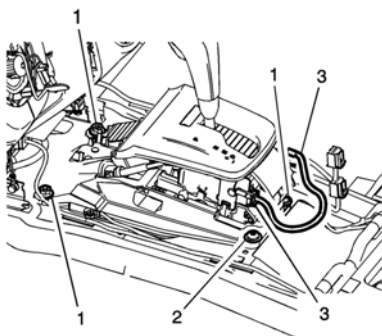


2. Disconnect 2 electrical connectors (3) from the transmission control assembly.
3. Remove the 2 transmission control nuts (1).
4. Remove the 2 transmission control bolts (2).

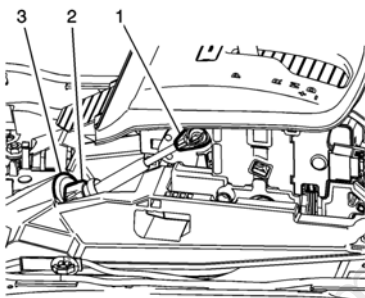


5. Using a flat bladed tool, disconnect the cable terminal (1) from the transmission control shift pin.
6. Compress the two retaining tabs (2) and remove the automatic transmission range selector cable from the transmission control.
7. Disengage the automatic transmission range selector cable grommet (3) to the transmission control assembly.
8. Remove the transmission control from the vehicle.

[Installation Procedure](#)

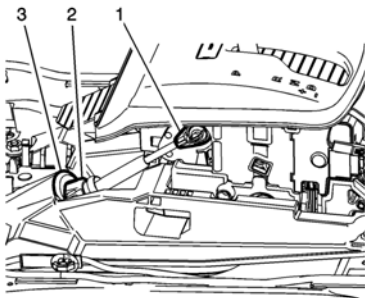

1. Install the automatic transmission range selector cable grommet (3) to the transmission control assembly.
2. Securely seat the cable retainer (2) in the transmission control assembly.
3. Connect the cable terminal (1) to the transmission control shift pin.

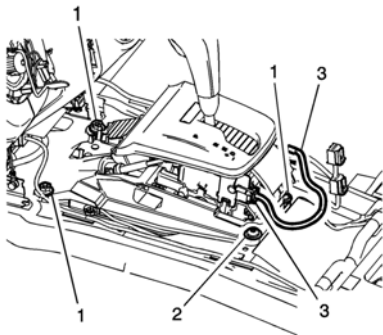

4. Connect 2 electrical connectors (3) to the transmission control assembly.

Caution: Refer to Fastener Caution.

5. Install the 2 transmission control nuts (1).
6. Install the 2 transmission control bolts (1).
7. Install the front floor console. Refer to Front Floor Console Replacement.
8. Adjust the automatic transmission range selector cable. Refer to Range Selector Lever Cable Adjustment.