


2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:

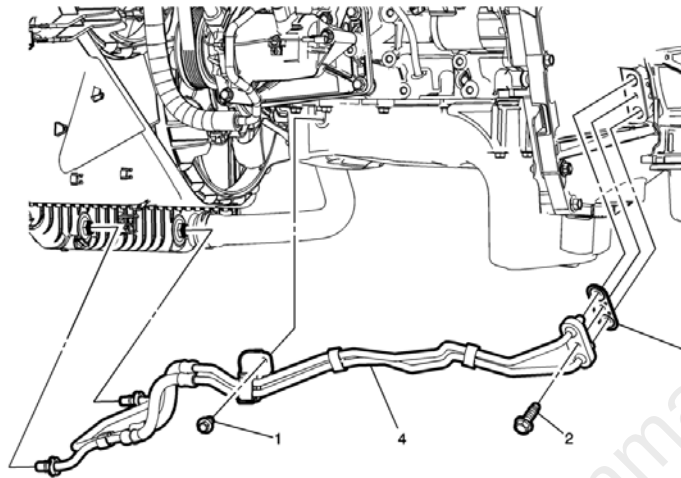

Transmission Fluid Cooler Inlet and Outlet Pipe Replacement

Callout

Component Name

Preliminary Procedures

1. Raise the vehicle. Refer to Lifting and Jacking the Vehicle.
2. Remove the engine protection shield . Refer to Engine Protection Shield Replacement.
3. Place a drain pan under the transmission fluid cooler inlet and outlet pipes.

- 1 Transmission Fluid Cooler Inlet and Outlet Pipe Bracket Fastener

Transmission Fluid Cooler Inlet and Outlet Pipe Fastener

Caution: Refer to Fastener Caution.

- 2 **Note:** Remove and DISCARD the old sealing washer and replace with a NEW sealing washer.

Tighten

22 Y (16 lb ft)

- 3 Transmission Fluid Cooler Inlet and Outlet Pipe Seal

Transmission Fluid Cooler Inlet and Outlet Pipe Assembly

Procedures

- 4
1. Disconnect the transmission fluid cooler inlet and outlet pipes from the quick-connect fittings at the radiator. Refer to Transmission Fluid Cooler Hose/Pipe Quick-Connect Fitting Disconnection and Connection.
 2. Discard seals and replace with new seals.
 3. Check the transmission fluid level and fill the transmission to the proper level. Refer to Fluid Capacity Specifications.