

Last Modified: 12-21-2017	6.8:8.0.48	Doc ID: RM100000000T2XY
Model Year Start: 2016	Model: LX570	Prod Date Range: [09/2015 -]
Title: AE80F AUTOMATIC TRANSMISSION / TRANSAXLE: COMBINATION SWITCH: INSPECTION; 2016 - 2018 MY LX570 [09/2015 -]		

INSPECTION


PROCEDURE

1. INSPECT INTEGRATION CONTROL AND PANEL ASSEMBLY

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance

TESTER CONNECTION	SWITCH CONDITION	SPECIFIED CONDITION
8 (P) - 1 (E)	SPORT S or SPORT S+ mode switch turned and held at SPORT S or SPORT S+ position	Below 1 Ω
	SPORT S or SPORT S+ mode switch not turned	10 kΩ or higher
6 (ECU) - 1 (E)	COMF or ECO mode switch turned and held at COMF or ECO position	Below 1 Ω
	COMF or ECO mode switch not turned	10 kΩ or higher
19 (2nd) - 1 (E)	Mode switch (ECT 2nd) on	Below 1 Ω
	Mode switch (ECT 2nd) off	10 kΩ or higher
7 (B) - 1 (E)	NORMAL mode switch pushed and held	Below 1 Ω
	NORMAL mode switch not pushed	10 kΩ or higher

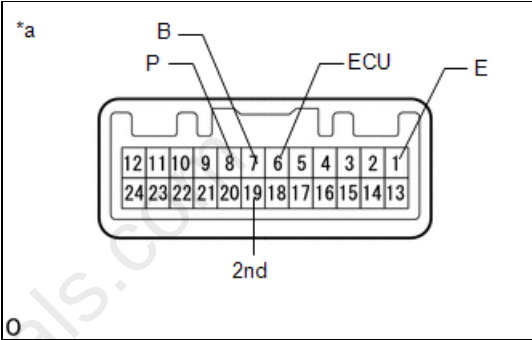

Text in Illustration

*a	Component without harness connected (Integration Control and Panel Assembly)
----	---

If the result is not as specified, replace the integration control and panel assembly.