
CIRCUIT DIAGRAM


[Circuit Diagram]

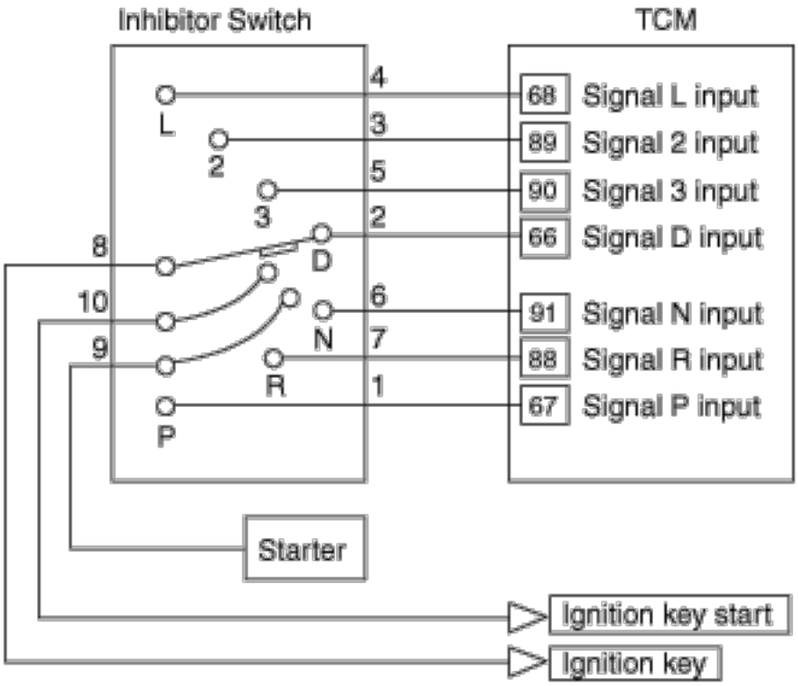


[Connection Information]

Terminal	Connected to	Function
1	TCM (67)	Signal P input
2	TCM (66)	Signal D input
3	TCM (89)	Signal 2 input
4	TCM (68)	Signal L input
5	TCM (90)	Signal 3 input
6	TCM (91)	Signal N input
7	TCM (88)	Signal R input
8	Ignition switch	Battery voltage after ignition key on
9	Ignition switch	Battery voltage after ignition key start
10	Starter	Supply the voltage to starter

[Harness Connector]

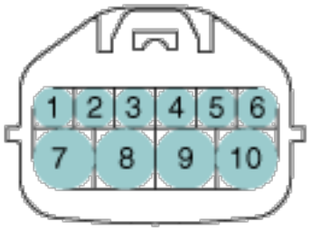

Inhibitor Switch Connector

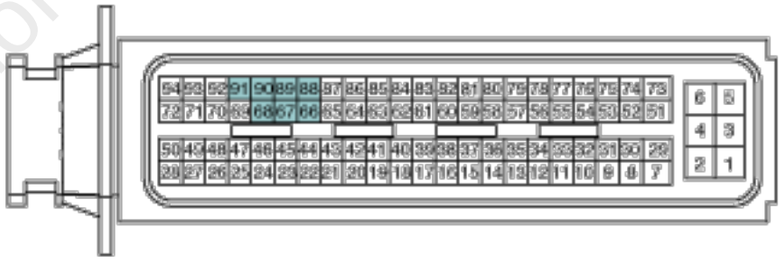

TCM Connector

transmissionmanuals.com